
:::Cuperlight

INSTRUCTION LETTER

Model	Power	Color	Size	Luminous Flux	Voltage	Picture
CPR-COB	8W	3000K/6500K	75MM diameter	800LM	85-265V	
CPR-SMD	8	3000K/6500K	80MM Diameter	800LM	85-265V	
JLWL1001	6W	3000K	80*60*60mm	600LM	85V-265V	
WL142-WH	200	6500K/3000K	80*160mm	2000LM	85V-265V	
WL142-GRAY	20W	6500K/3000K	80*160mm	2000LM	85V-265V	

Installaton instructions:

- 1. Turn off the electricity.
- 2. Flxing the flxture on the mounting.
- 3. Connect cables to the gear.
- 4. Flx the lamp on the flxture.
- 5.turn on the electricity.
- 6.lamp works normally.

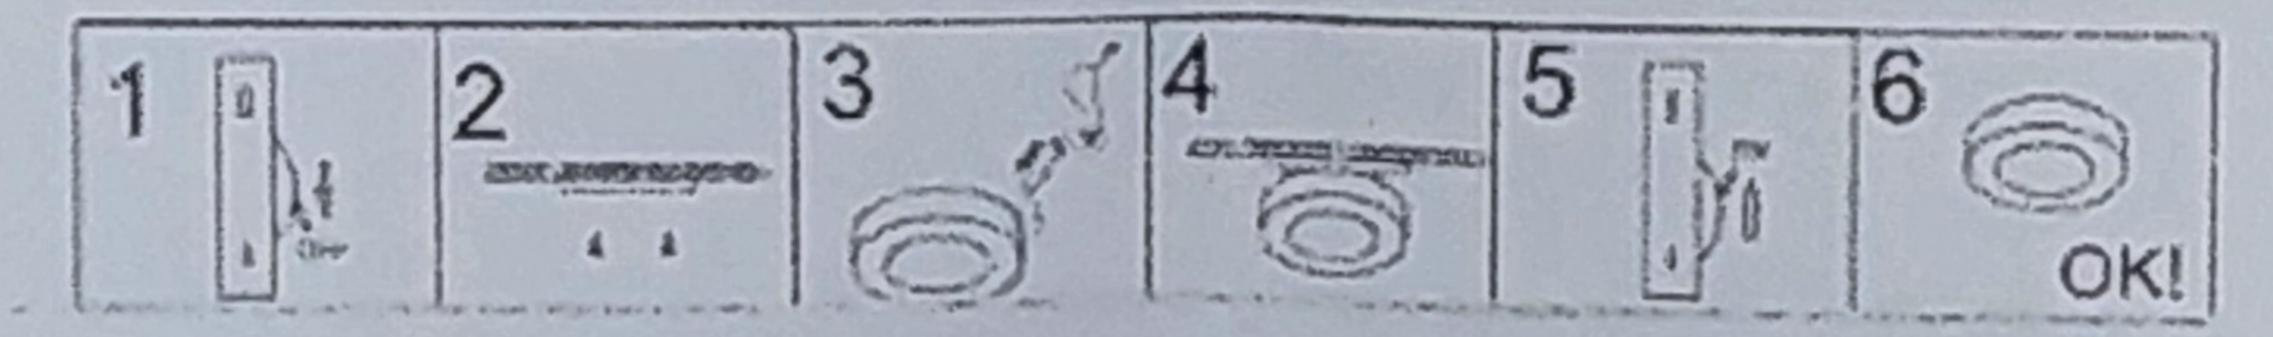

WARNING!

- 1. Cut off power before installation.
- 2. Can not be used as emergency light.
- 3. Nothing should cover the product.
- 4. The environment temperature of the lamp operation is -10°C to +40°C.