


## LED WALLLAMP INSTRUCTIONLETTER

Model	Power	FRAME COLOR	Color	Size(mm)	minous Flu	Voltage	Picture
GLW2019- 8*1W SN/WW	6*1V	SN	3000K	120*50M M	600LN	85V-265V	
GLW2019- 6°1W SN/WW	8414	SN	3000K	170*50MI M	BOOLI	85V-265V	
GLW903S- 14\V WH/WW	147	WHITE	3000K	200*200	1400LM	85V-265V	
GLW903R- 13W WH/WW	137	WHITE	3000%	245-130	1300LN	85V-265V	
JLW2018- 6W/160MM WH/WW	61	WHITE	3000K	160*45	600LM	85V-265V	

## Installation instructions:

- 1. Turn off the electricity.
- 2. Cut the hole in its diameter.
- 3. Connect cables to the gear.
- 4. Press in the spring loaded arms and pull them up through the hole. The springs will pull the fixture up towards the celling
- 5, turn on the electricity.
- 6. lamp works normally.

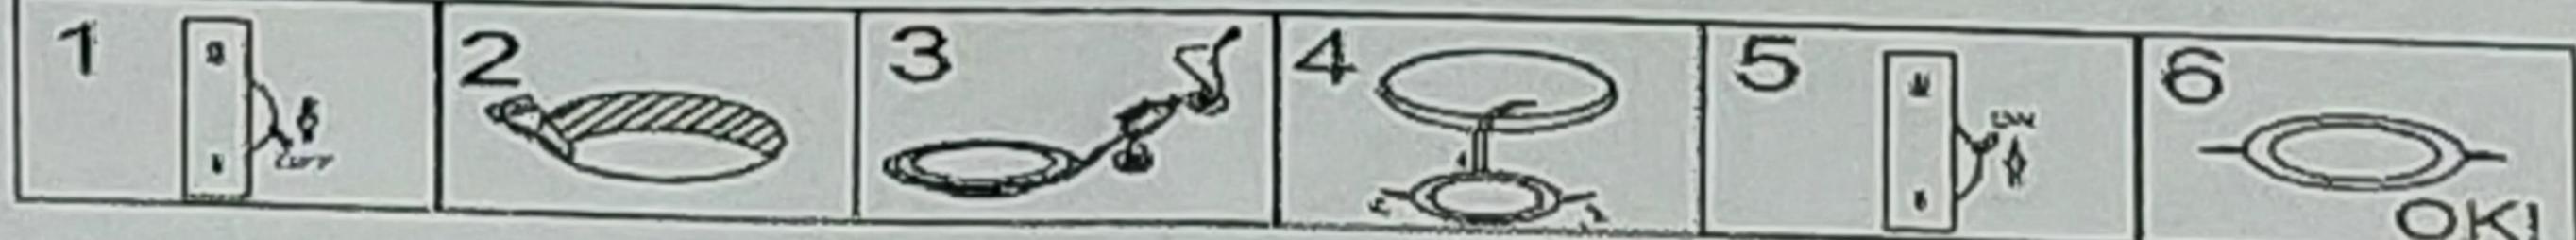

## WARNING!

- 1. Cut off power before installation.
- 2. Can not be used as emergency light.
- 3. Nothing should cover the product.
- 4. The environment temperature of the lamp operation is -10°C to +40°C,