


LED WALL LAMP

Model	Power	Luminous Flux	Voltage	Color	Picture
JL2017-10	1000	1000LM	85V-265V	Warmwhite	
JL2017B-10	1000	1000LM	85V-265V	Warmwhite	
JL2154-2	4	400LM	85V-265V	Warmwhite	
JL2175-4W	400	400LM	85V-265V	Warmwhite	
JL2020-4B	400	400LM	85V-265V	Warmwhite	

Installation instructions:

- 1. Turn off the electricity.
- 2. Fixing the fixture on the mounting.
- 3. Connect cables to the gear.
- 4. Fix the lamp on the fixture.
- 5. turn on the electricity.
- 6. lamp works normally.

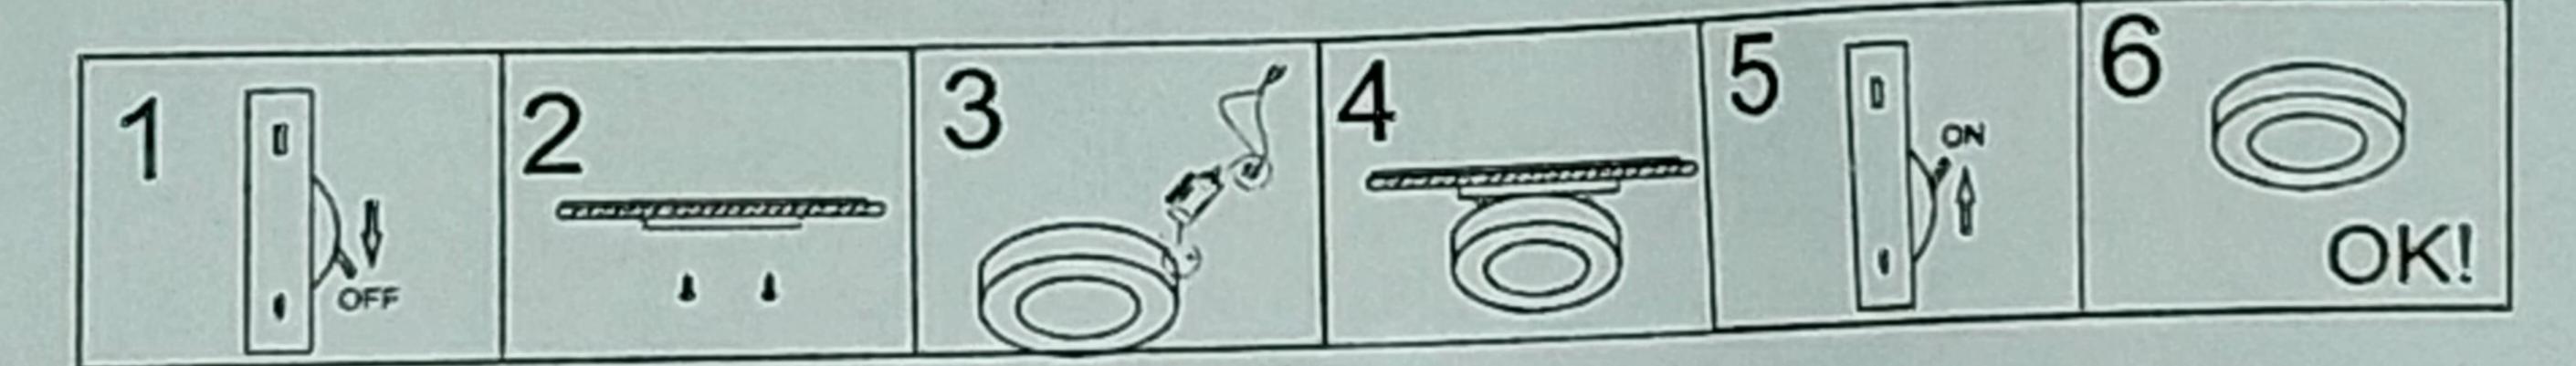

WARNING!

- 1. Cut off power before installation.
- 2. Can not be used as emergency light.
- 3. Nothing should cover the product.
- 4. The environment temperature of the lamp operation is -10°C to +40°C.