


MODEL:JF-1118R

INSTRUCTION MANUAL RACHARGEABLE WALL FAN

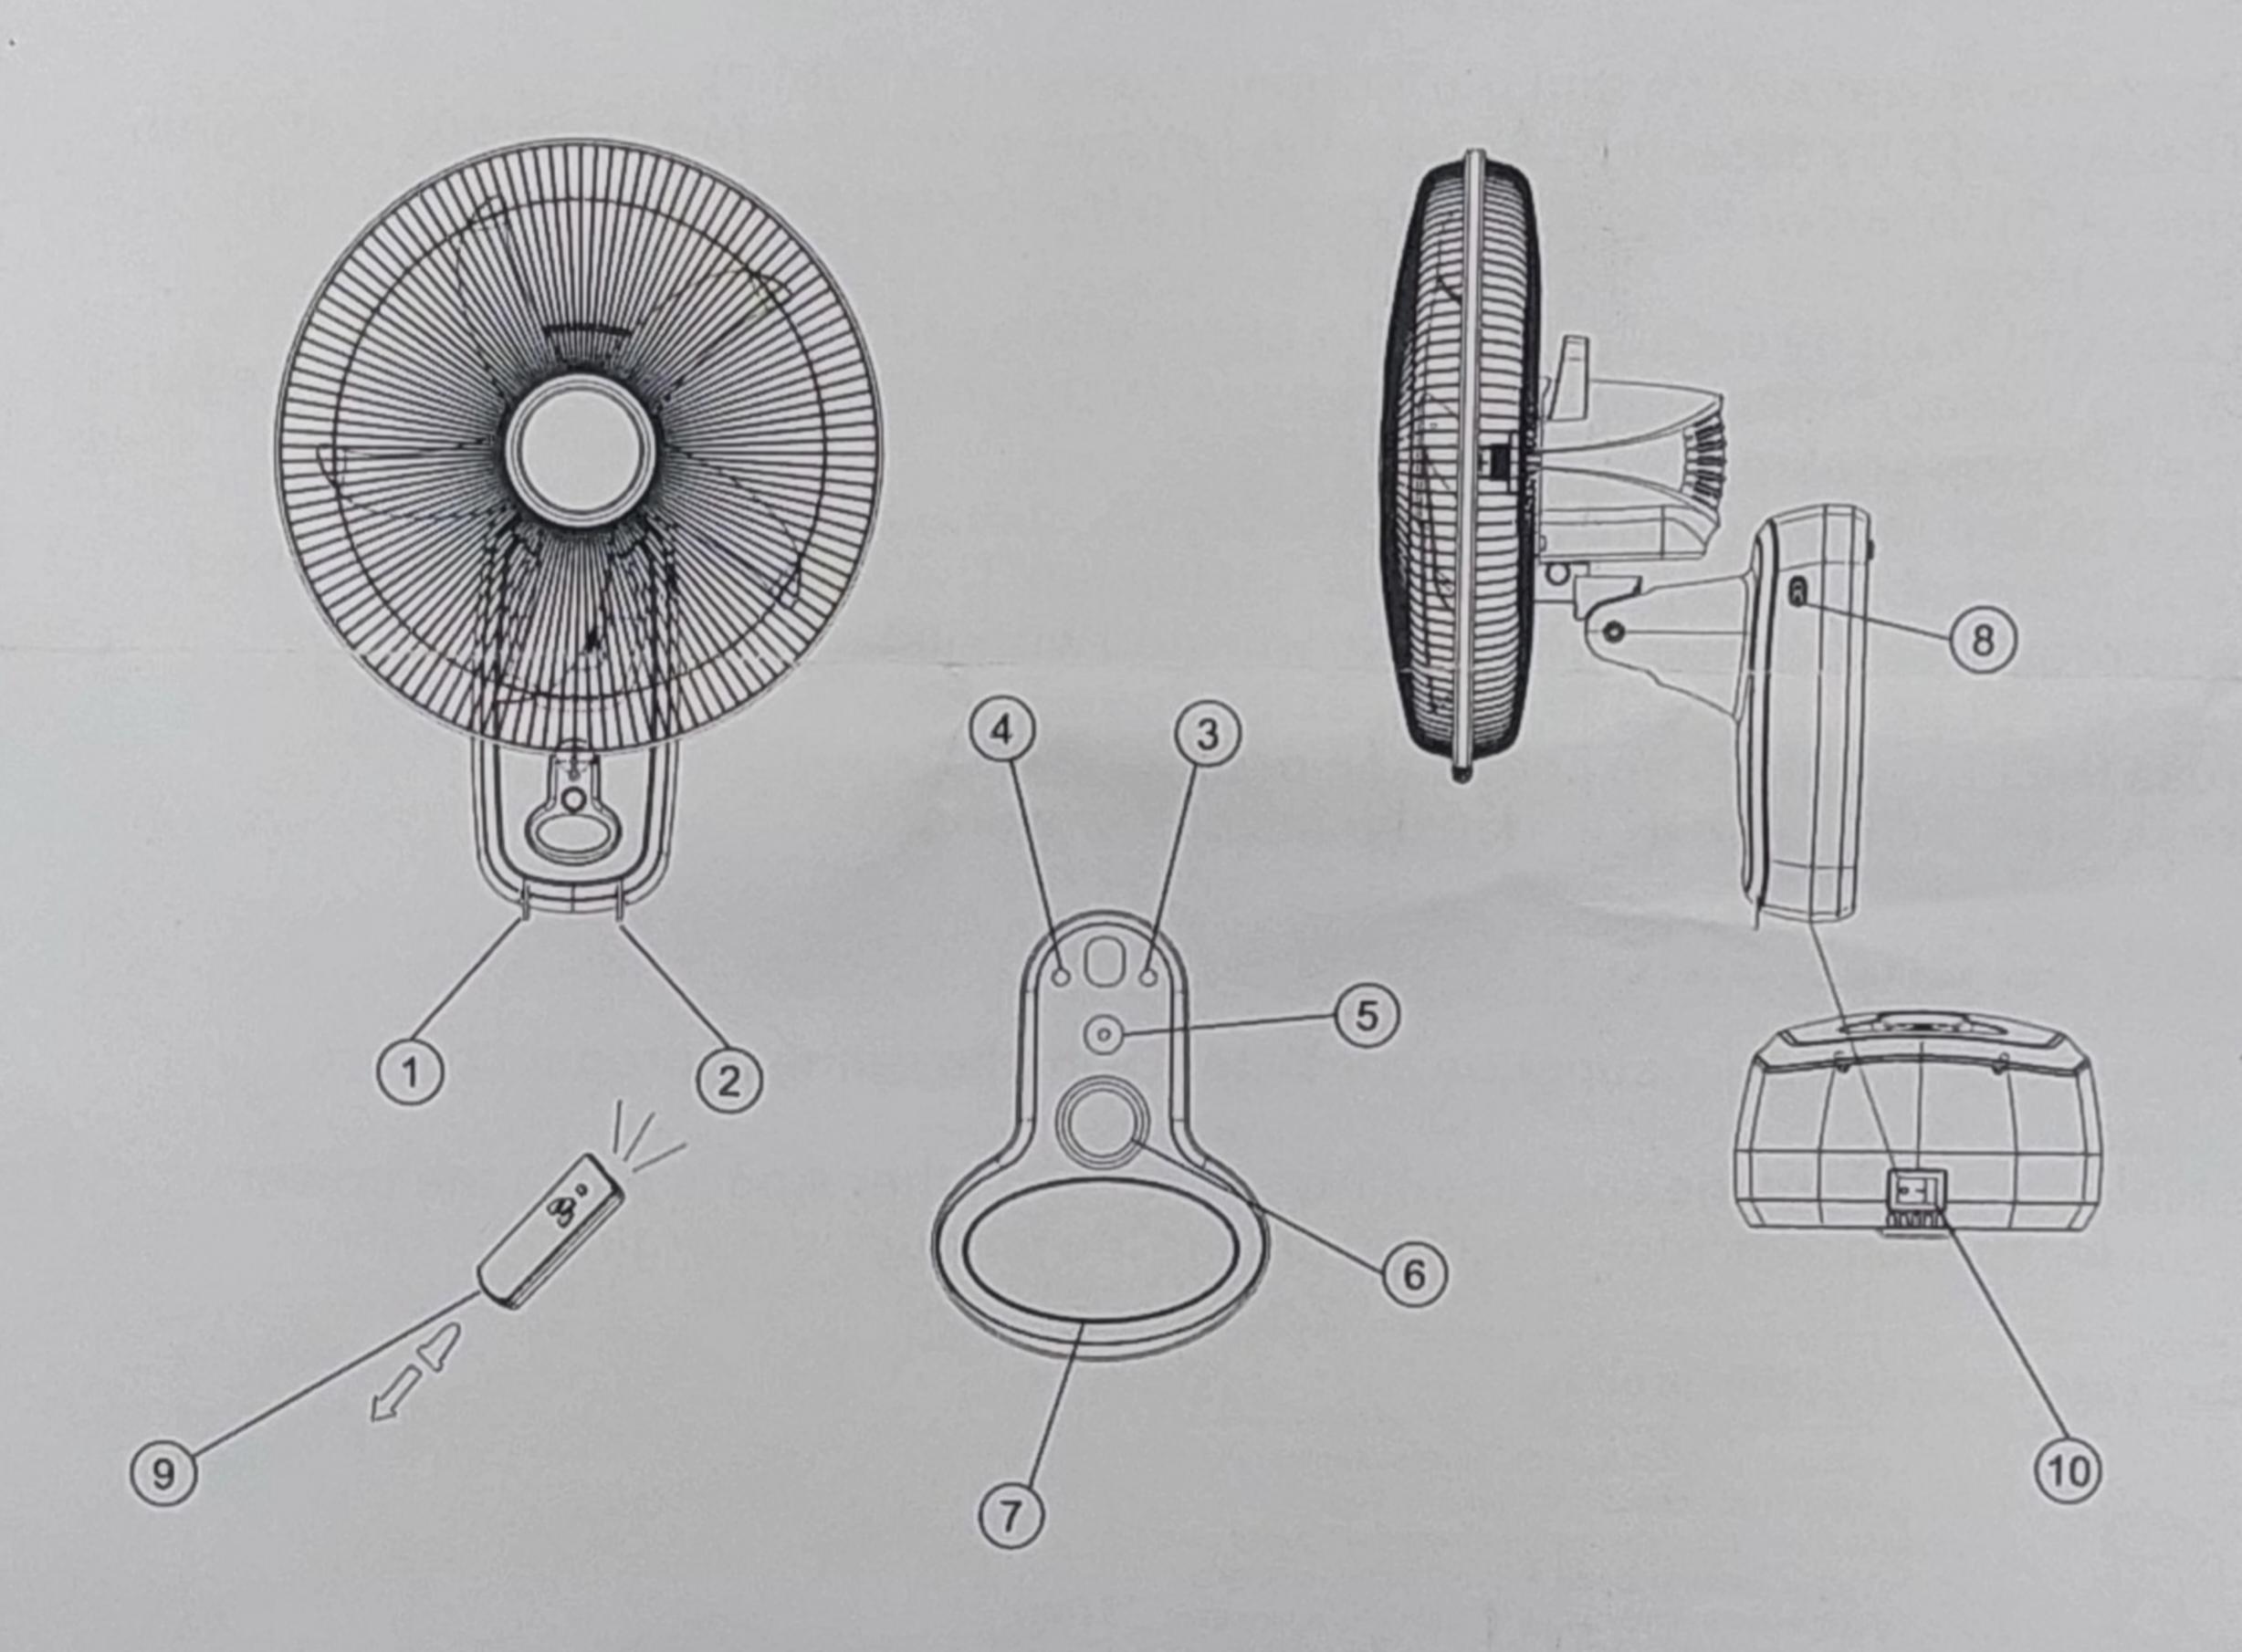

- 1.SHAKE HEAD PULL SWITCH
- 2.FAN PULL SWITCH
- 3.WORKING INDICATOR
- 4.CHARGE INDICATOR
- 5.DC SOCKET

- 6.LED SWITCH BUTTON
- 7.LED
- 8.AC SOCKET
- 9.REMOTE
- 10.POWER SWITCH

Thank you for using our product, please read the instruction manual carefully before initial use.

IMPORTANT NOTICE

- 1. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2. Children should be supervised to ensure that they do not play with the appliance.
- 3. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- 4. Fully charge the product before use. .
- 5. Switch off the product during storage, periodically charge the product at least 8 hours every 3 months when storage.
- 6. Keep out of water or rain for proper use.
- 7. The perfect working temperature is between 0°C and 40°C.
- 8. Once the product is out of operation, do not open or repair unless the qualified person.

HOW TO OPERATE

1. Open the power switch and the working indicator is lighting.

- 2. The fan is off by default. Pull down the fan pull switch the fan can work, pull again this and the fan working state is cycling in low speed to middle speed to high speed to off.
- 3.LED light is off by default. Press the LED switch and the LED is on.
- 4. When pull down the shake head pull switch the fan will shake head and pull again the fan stop shaking.
- 5. How to use remote, when first time using pls take out the silce.

Press the remote on/off button to turn on the fan. The fan is working in low speed and press this button again the fan will stop working.

Press the button "SPEED" can adjust the speed.

Press the LED button can choose on or off.

Press the OSCILLATION button the fan can shaking.


HOW TO CHARGING

- 1. Make sure the power supply is consistent with the rating of product before charging.
- 2.Methods one: put the cord to the AC socket and other side is put in the power supply, the red indicator is lighting means the product is charging.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

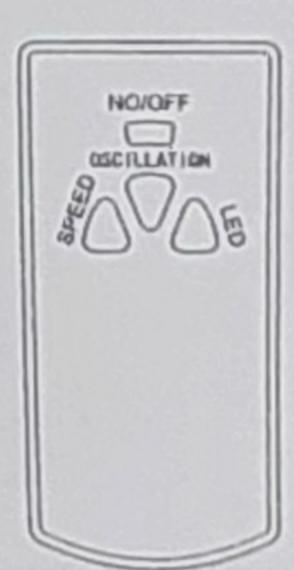

Technical data

Power source: 220-240V~ 50/60Hz

Battery:2X6V4.5Ah sealed lead-acid rechargeable batteries

Light source: 4pcs bright LED light

Charge time: 12-15 hours

Duration: 2.5 hours / DC high speed 5 hours / DC middle speed ≥ 10 hours / DC low speed LED: ≥ 100hours / LED light

Dimension:520X335X520mm