 


MODEL: JF-5401B

# INSTRUCTION MANUAL

## 14" RECHARGEABLE TABLE FAN

---

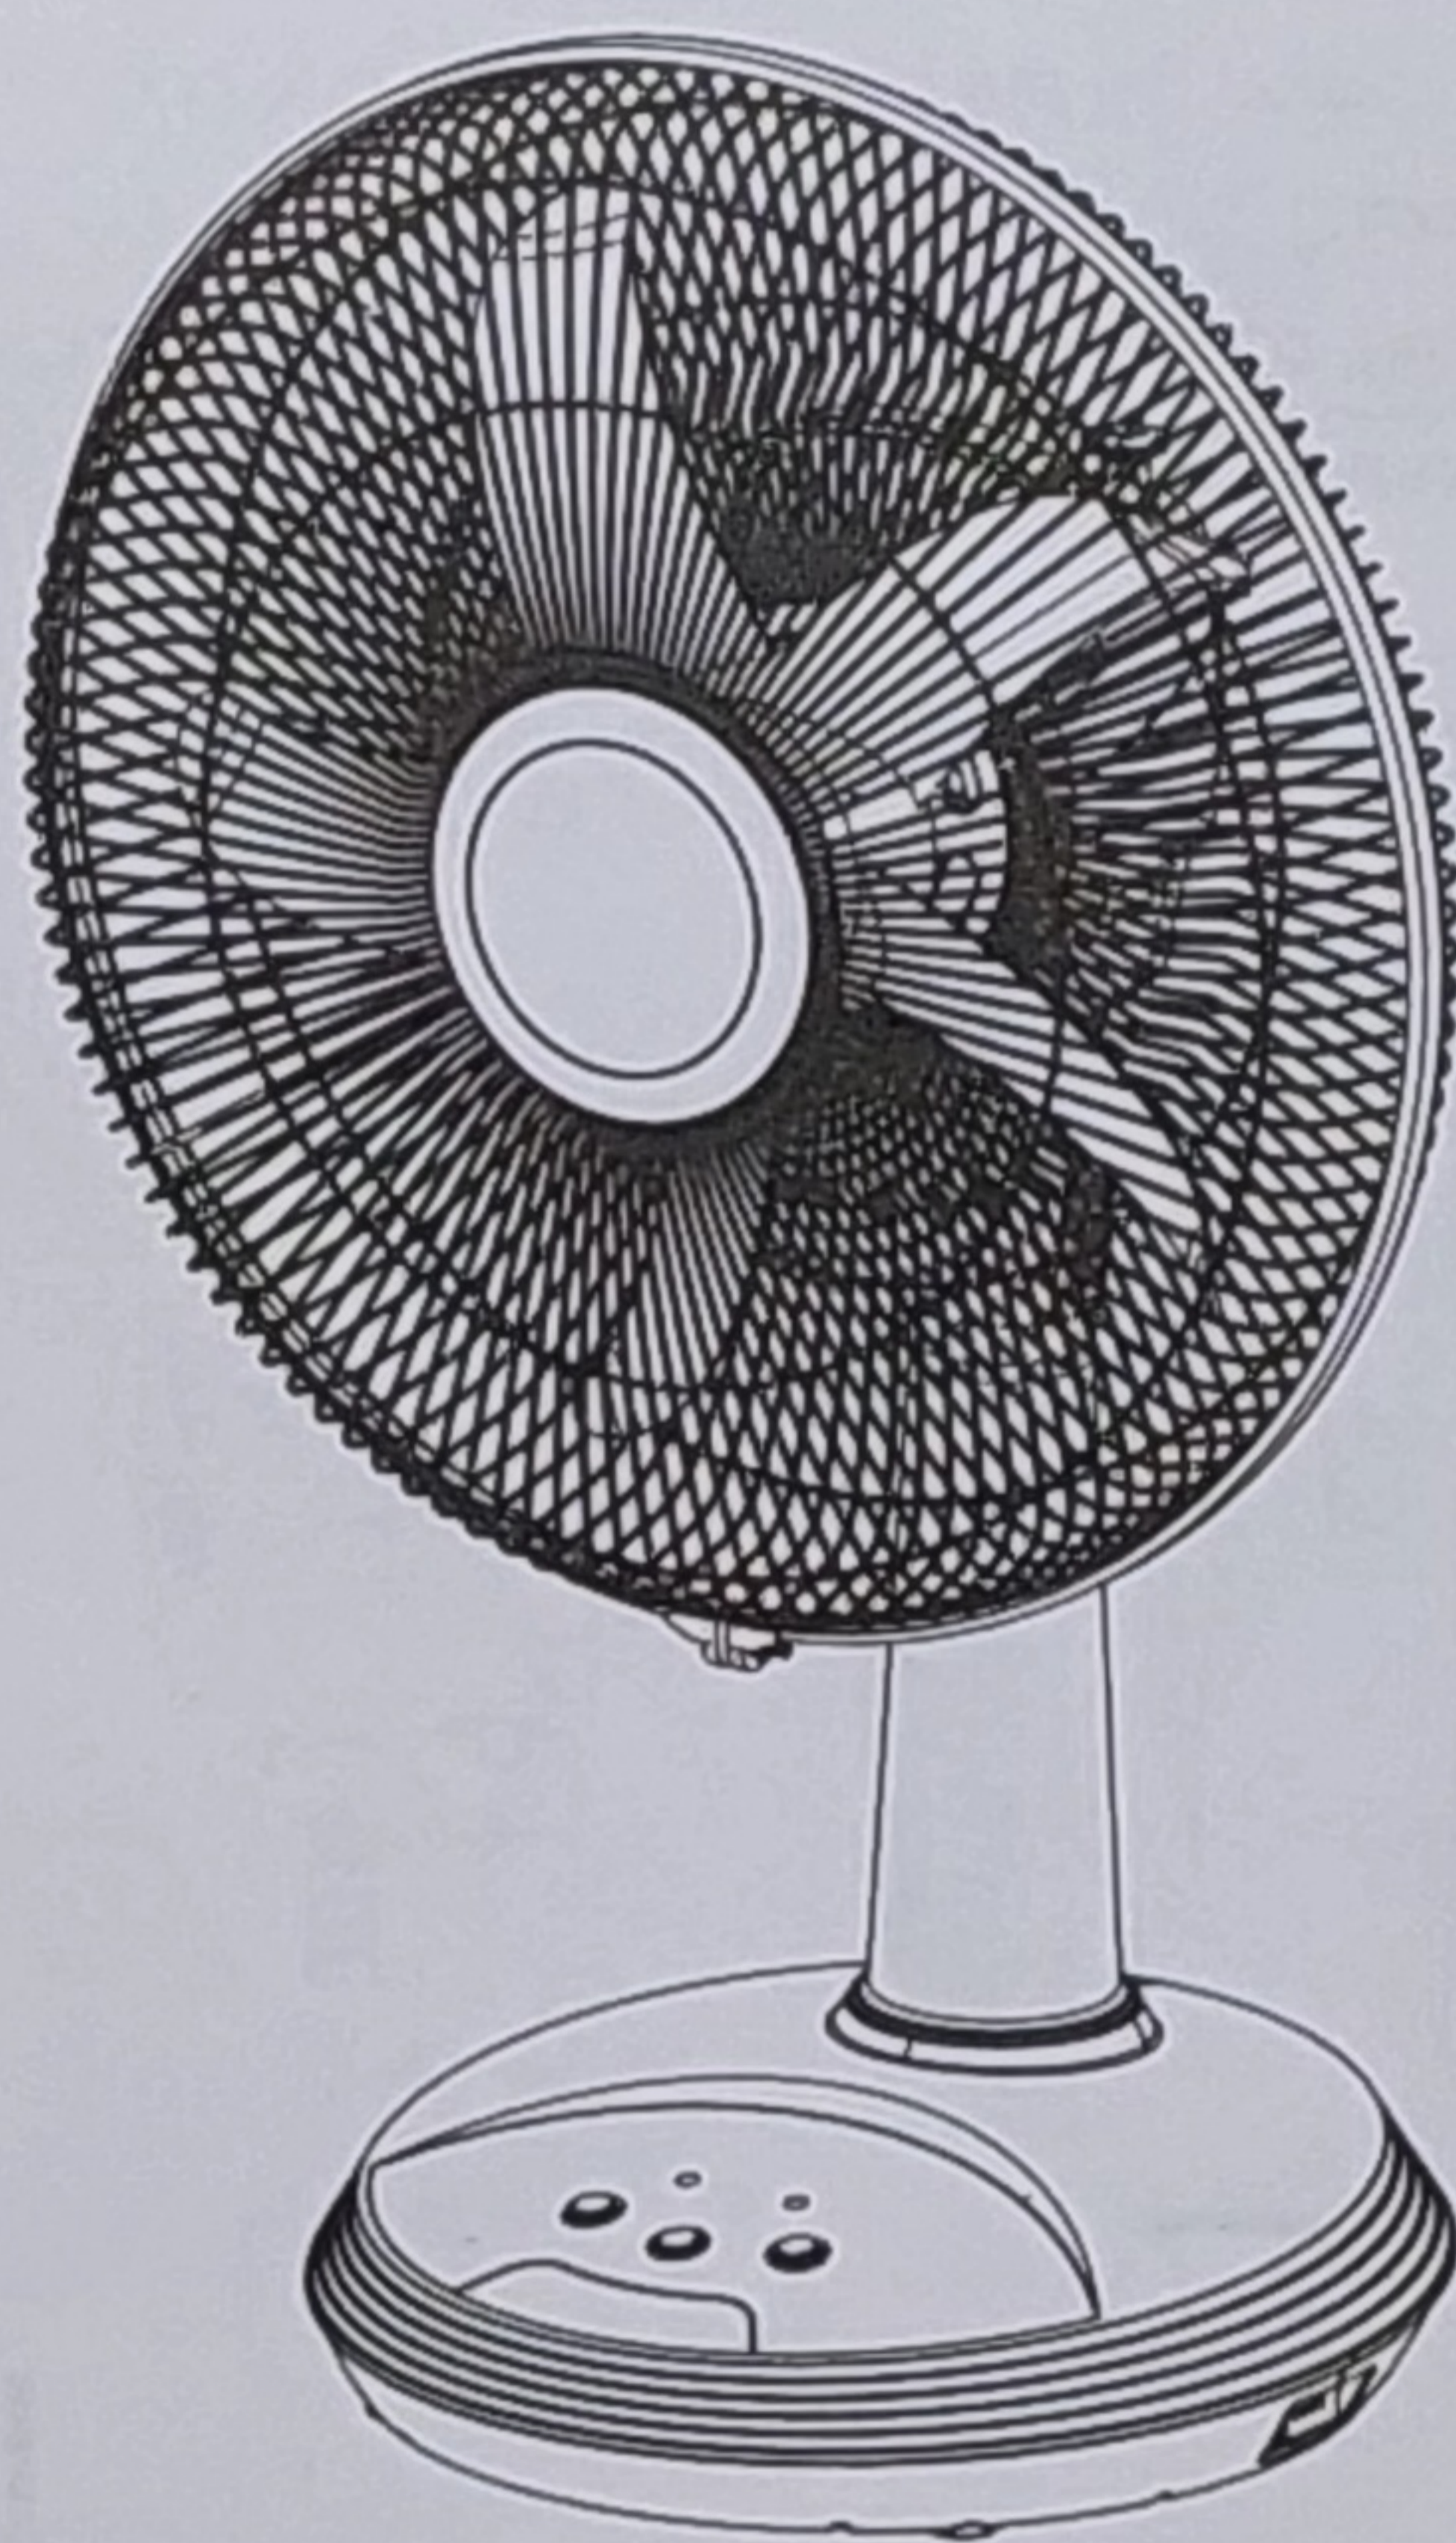


---

Thank you for using our product, please read the instruction manual carefully before initial use.




## HOW TO OPERATE

1. Please refer to drawing 2, put the main switch to the bottom of the machine to the open gear, products to enter standby mode.
2. Time button can adjust ON/OFF 0.5H, work light is flashing.
3. Gear switch can be controlled on key-low speed-middle speed-high speed-off key, circulation.
4. LED buttons can be control LED Lights ON and OFF.
5. Shake head to switch can control the fan whether shook his hea, Press is shaking, pull up is not shaking.
6. Refer to the drawing 2, put the main switch at the bottom of the machine to the off gear, then can shut off the power.

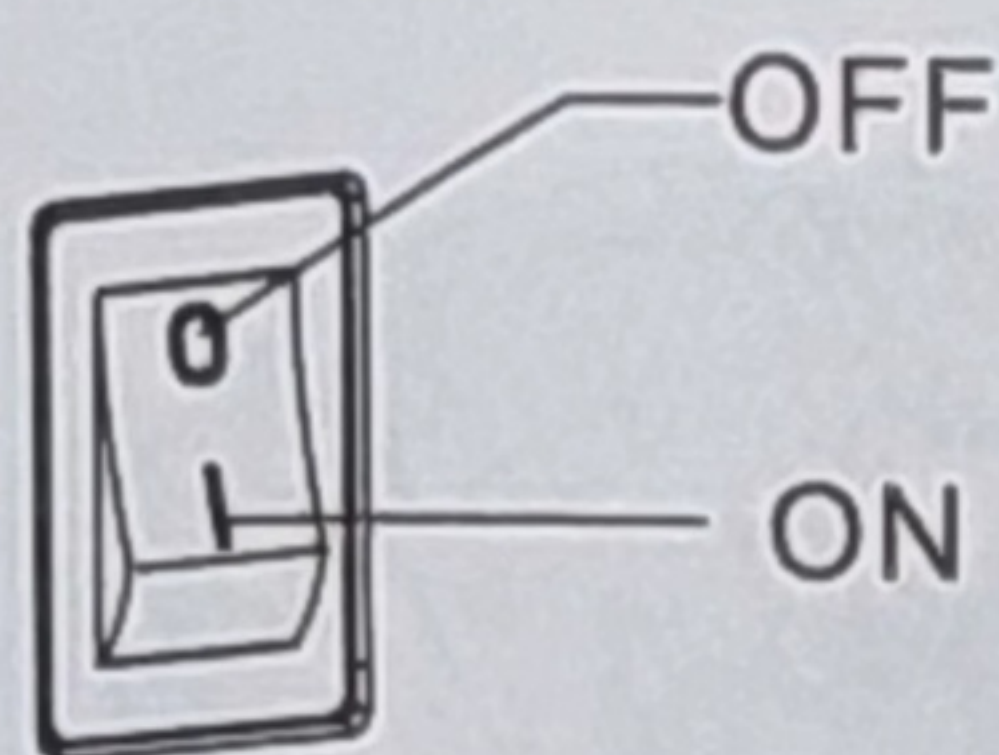


Drawing 2

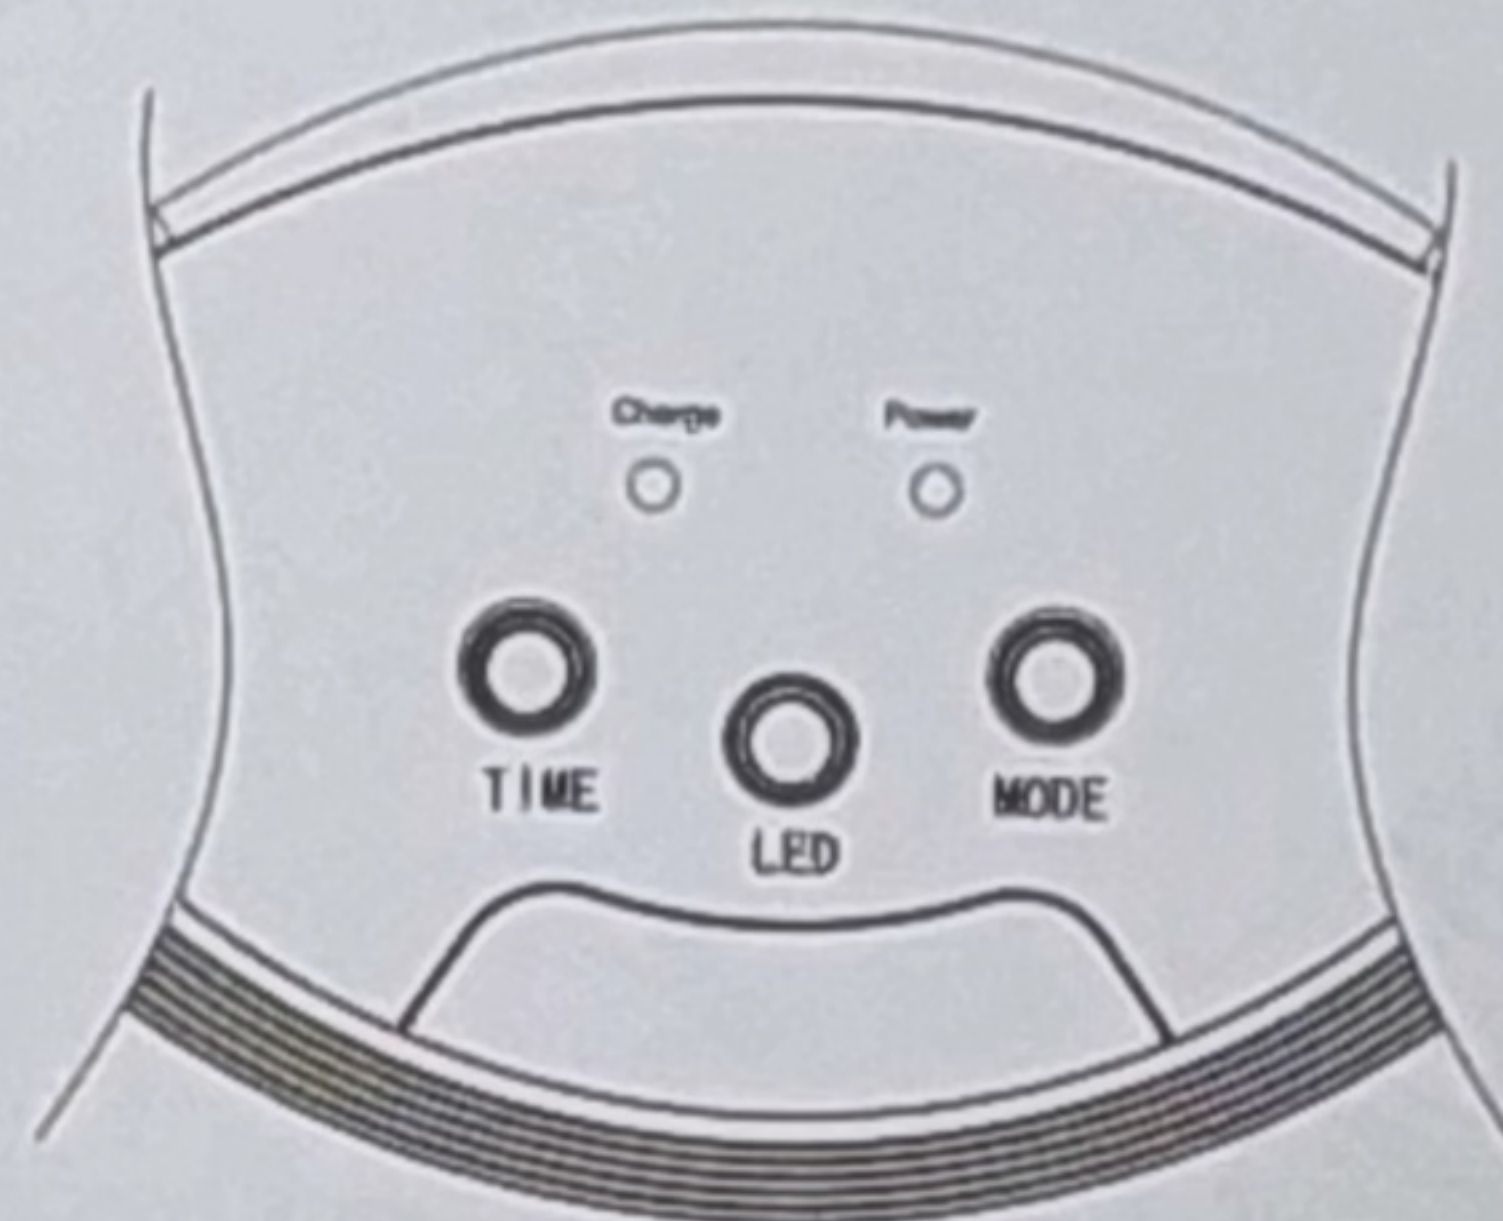

---

## HOW TO CHARGE

1. Make sure the power supply is consistent with the rating of product before charging.
2. AC charging: insert the AC power supply through the power cord into the AC power supply socket, the battery will automatically charge, when the battery is full, the charging light will turn to green.
3. DC charging: insert the DC power supply through the power cord into the DC power supply socket, the battery will automatically charge, when the battery is full, the charging light will turn to green.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

---

## TECHNICAL DATA

1. Power source: 220-240V~50/60Hz
2. Battery: 6V7Ah lead battery
3. Light source: 4 pcs bright LED light
4. Charging time: 12-15 hours
5. Duration: 4hours/high speed  
12 hours/middle speed  
30 hours/low speed  
70 hours/light
6. Dimension: 426X280X573mm

MADE IN P.R.C.




## IMPORTANT NOTICE



- \* This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - \* Children should be supervised to ensure that they do not play with the appliance.
  - \* "X" type supply cord: If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
1. Fully charge the product before use. Read "HOW TO CHARGE".
  2. Switch off the product during storage. Periodically charge the product at least 8 hours every three months when storage.
  3. Keep out of water or rain for proper use. The perfect working temperature is between 0°C and 40°C.
  4. Once the product is out of operation, do not open or repair unless the qualified person.
- 

## HOW TO ASSEMBLE

1. Open the packing, take out all the accessories.
2. Take out the body, put into the base, then connect them.
3. Assemble the rear grill gasket big nut blade left screw nut, hoop front grill and protecting cover according to Drawing 3.
4. After finishing assembling, operate the fan to confirm the assembling correct.
5. The assembled fan can not be disassembled.

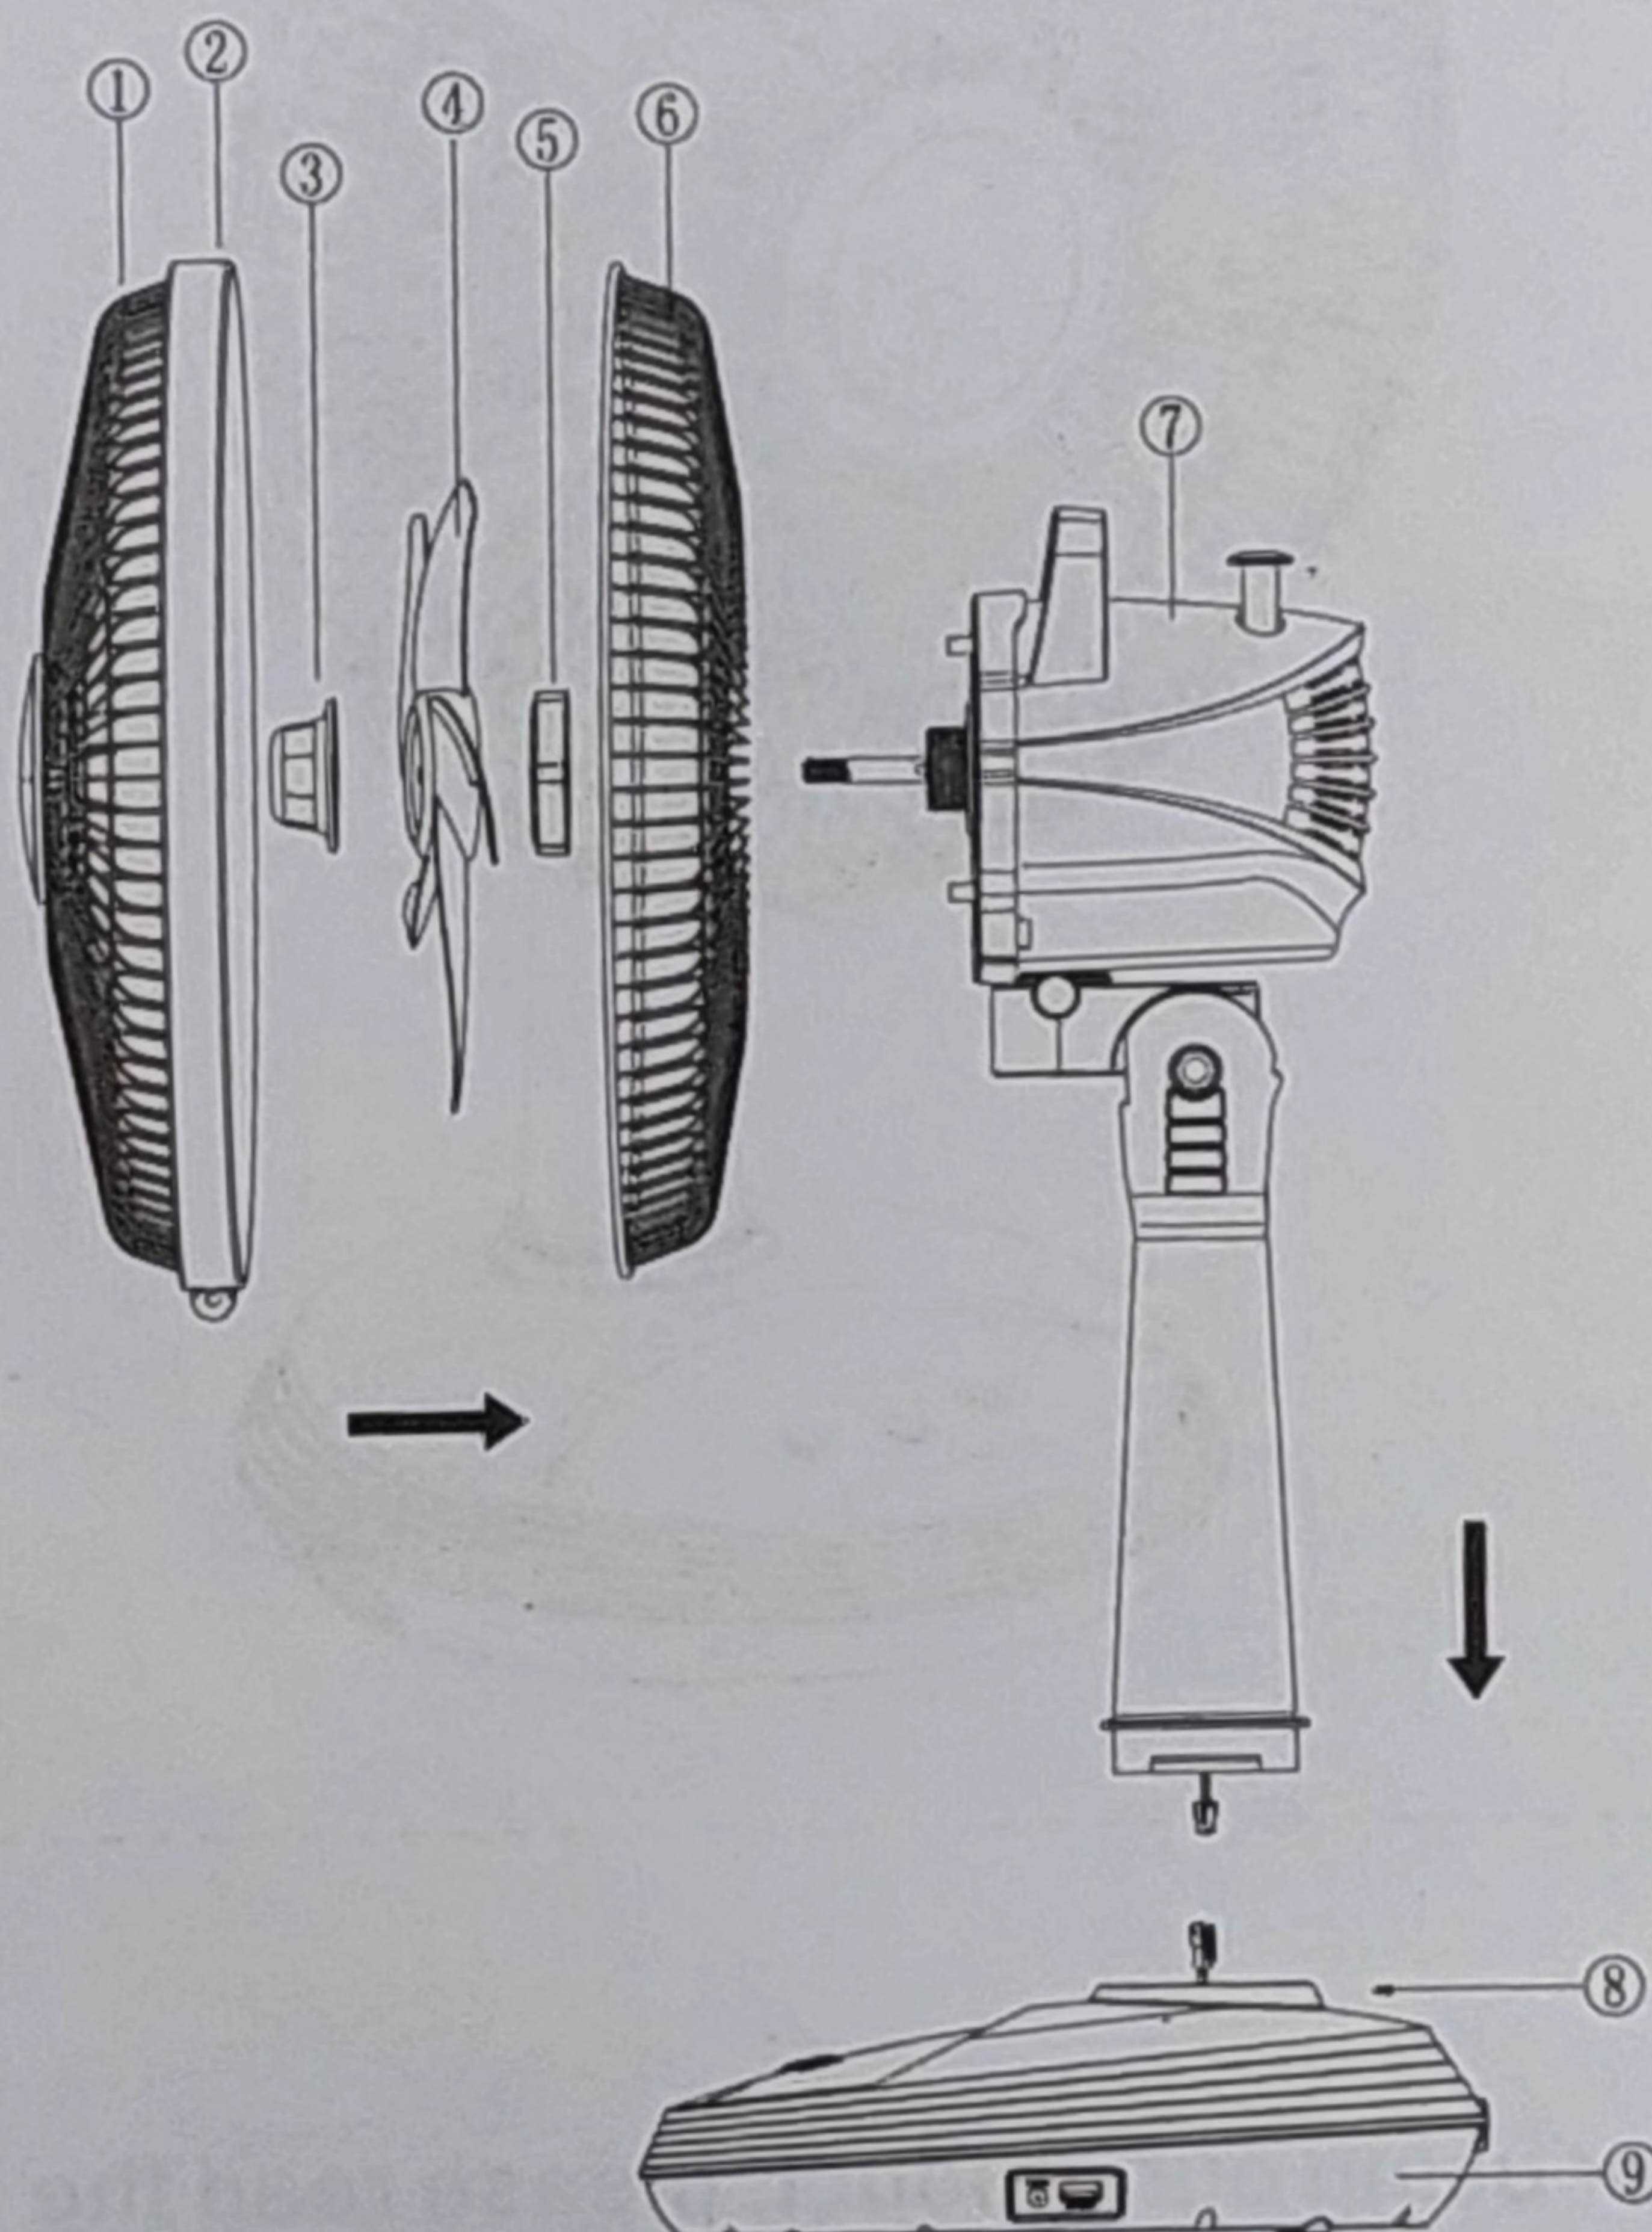



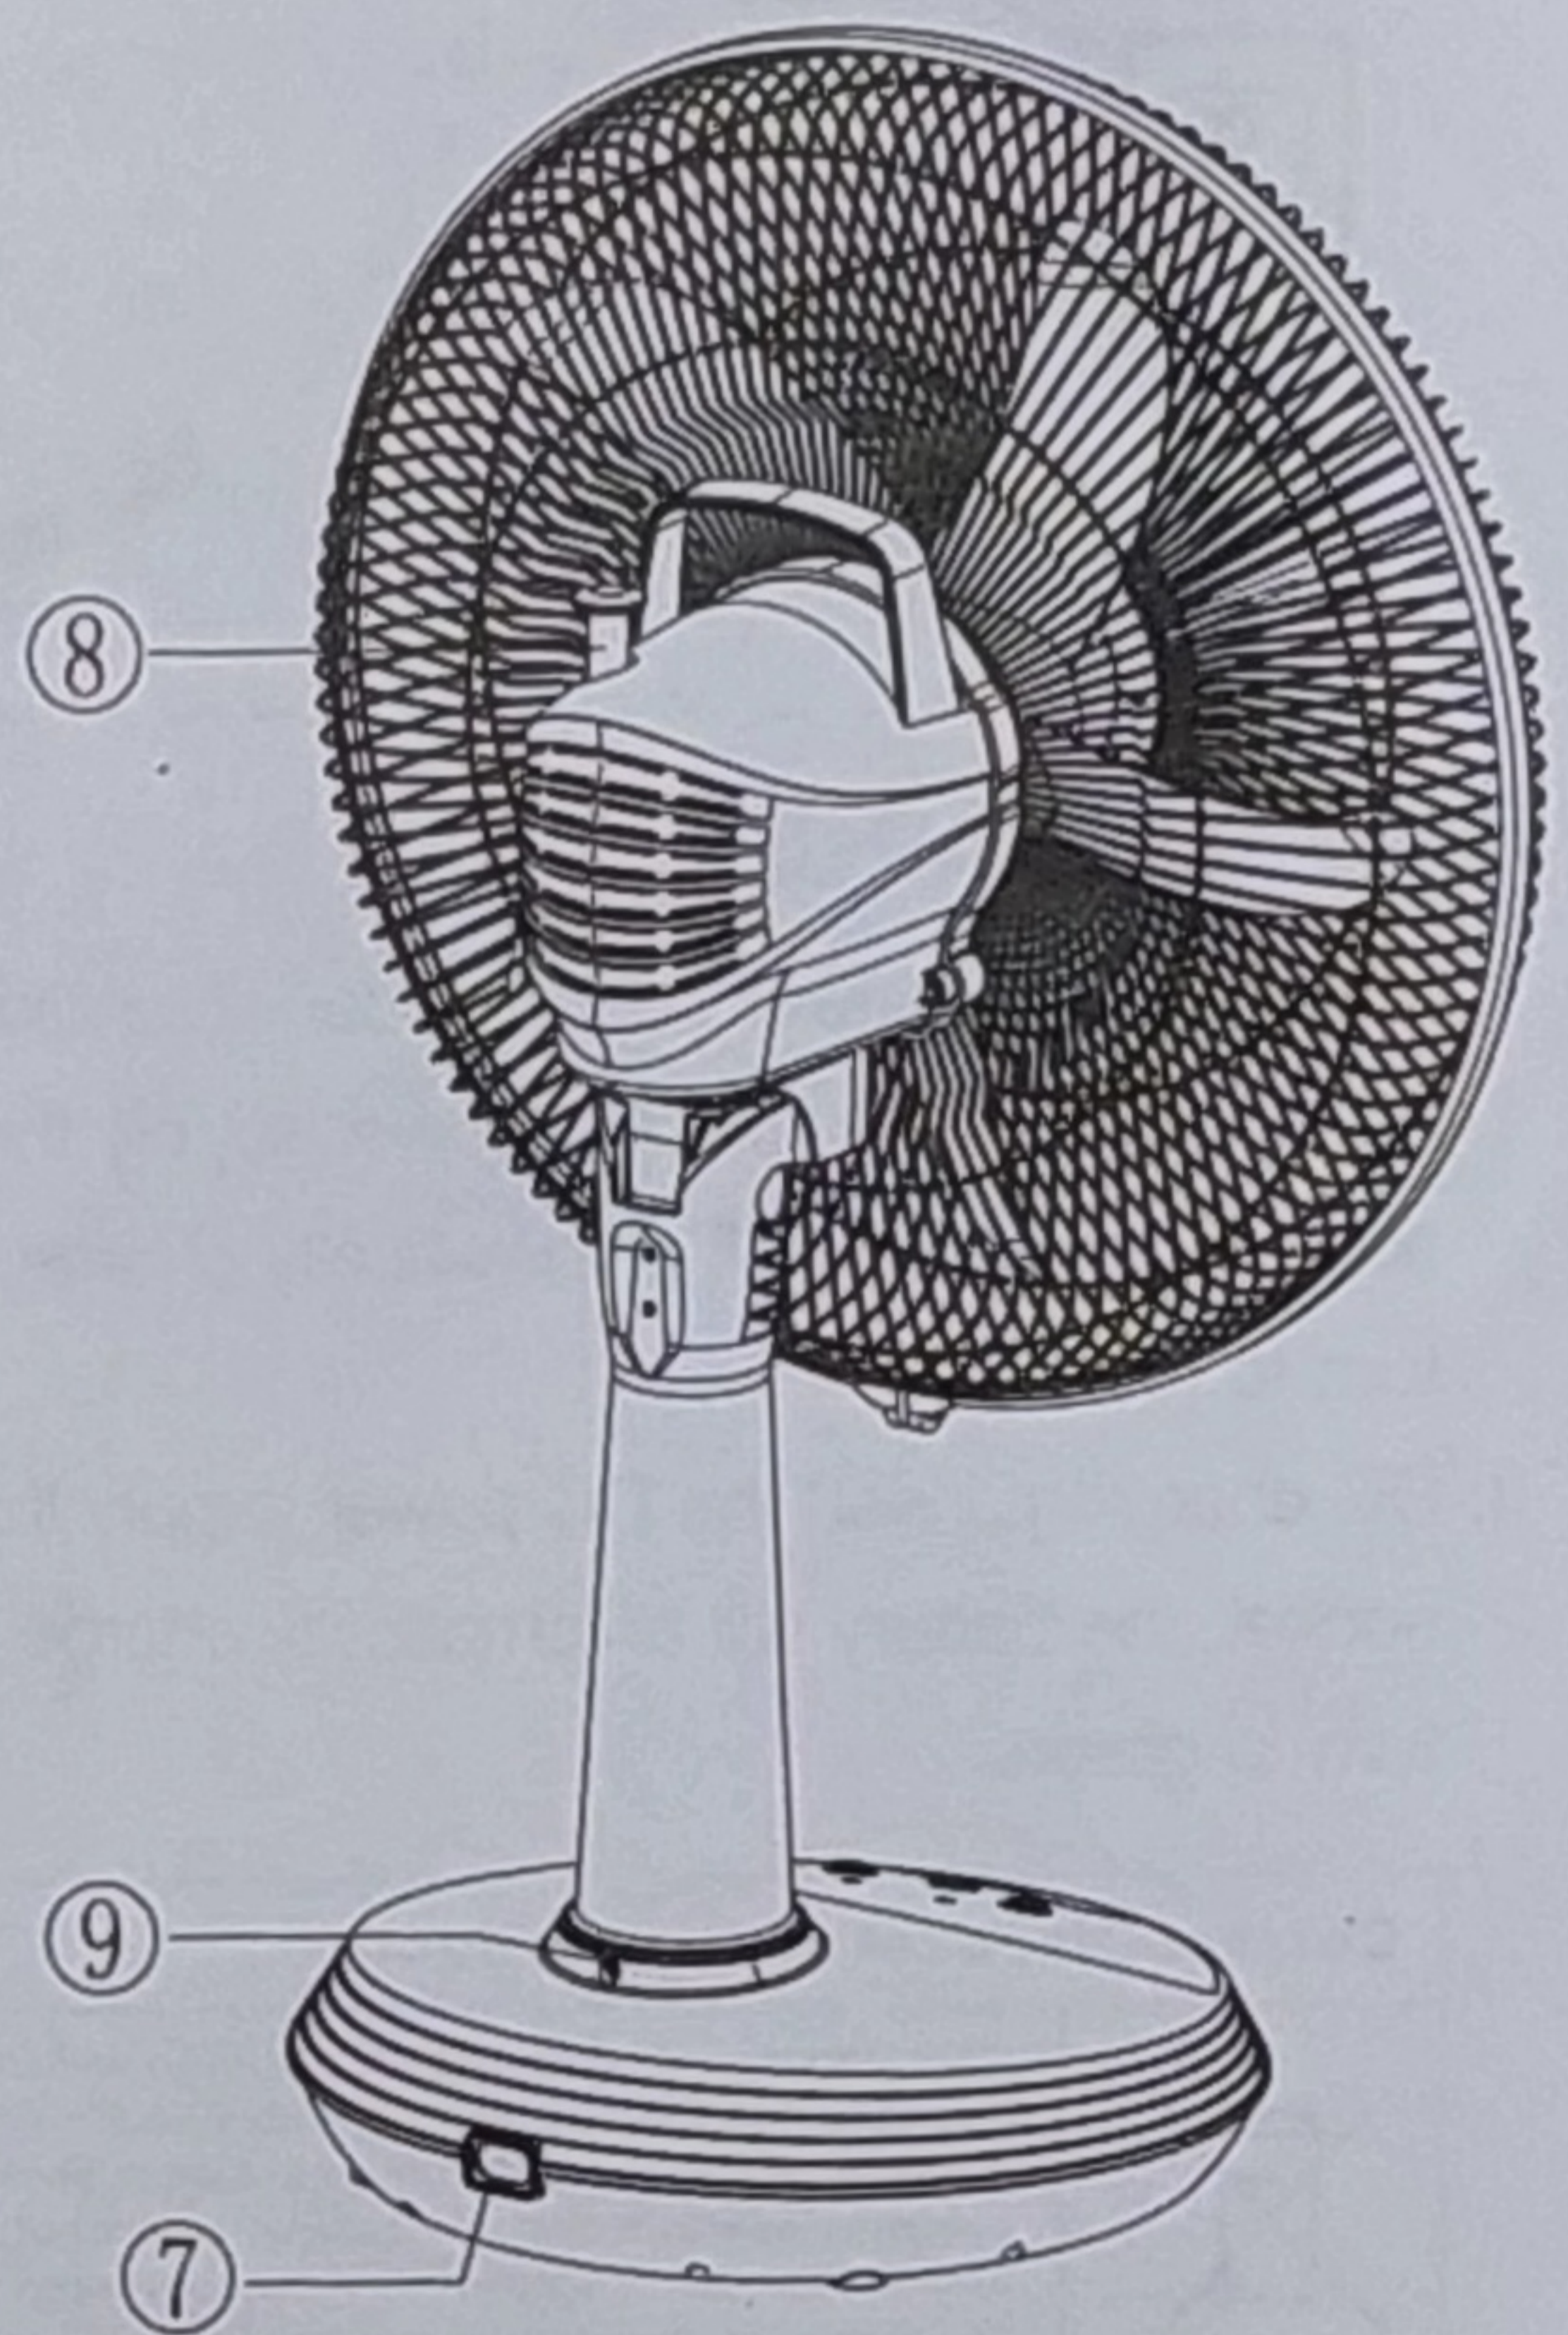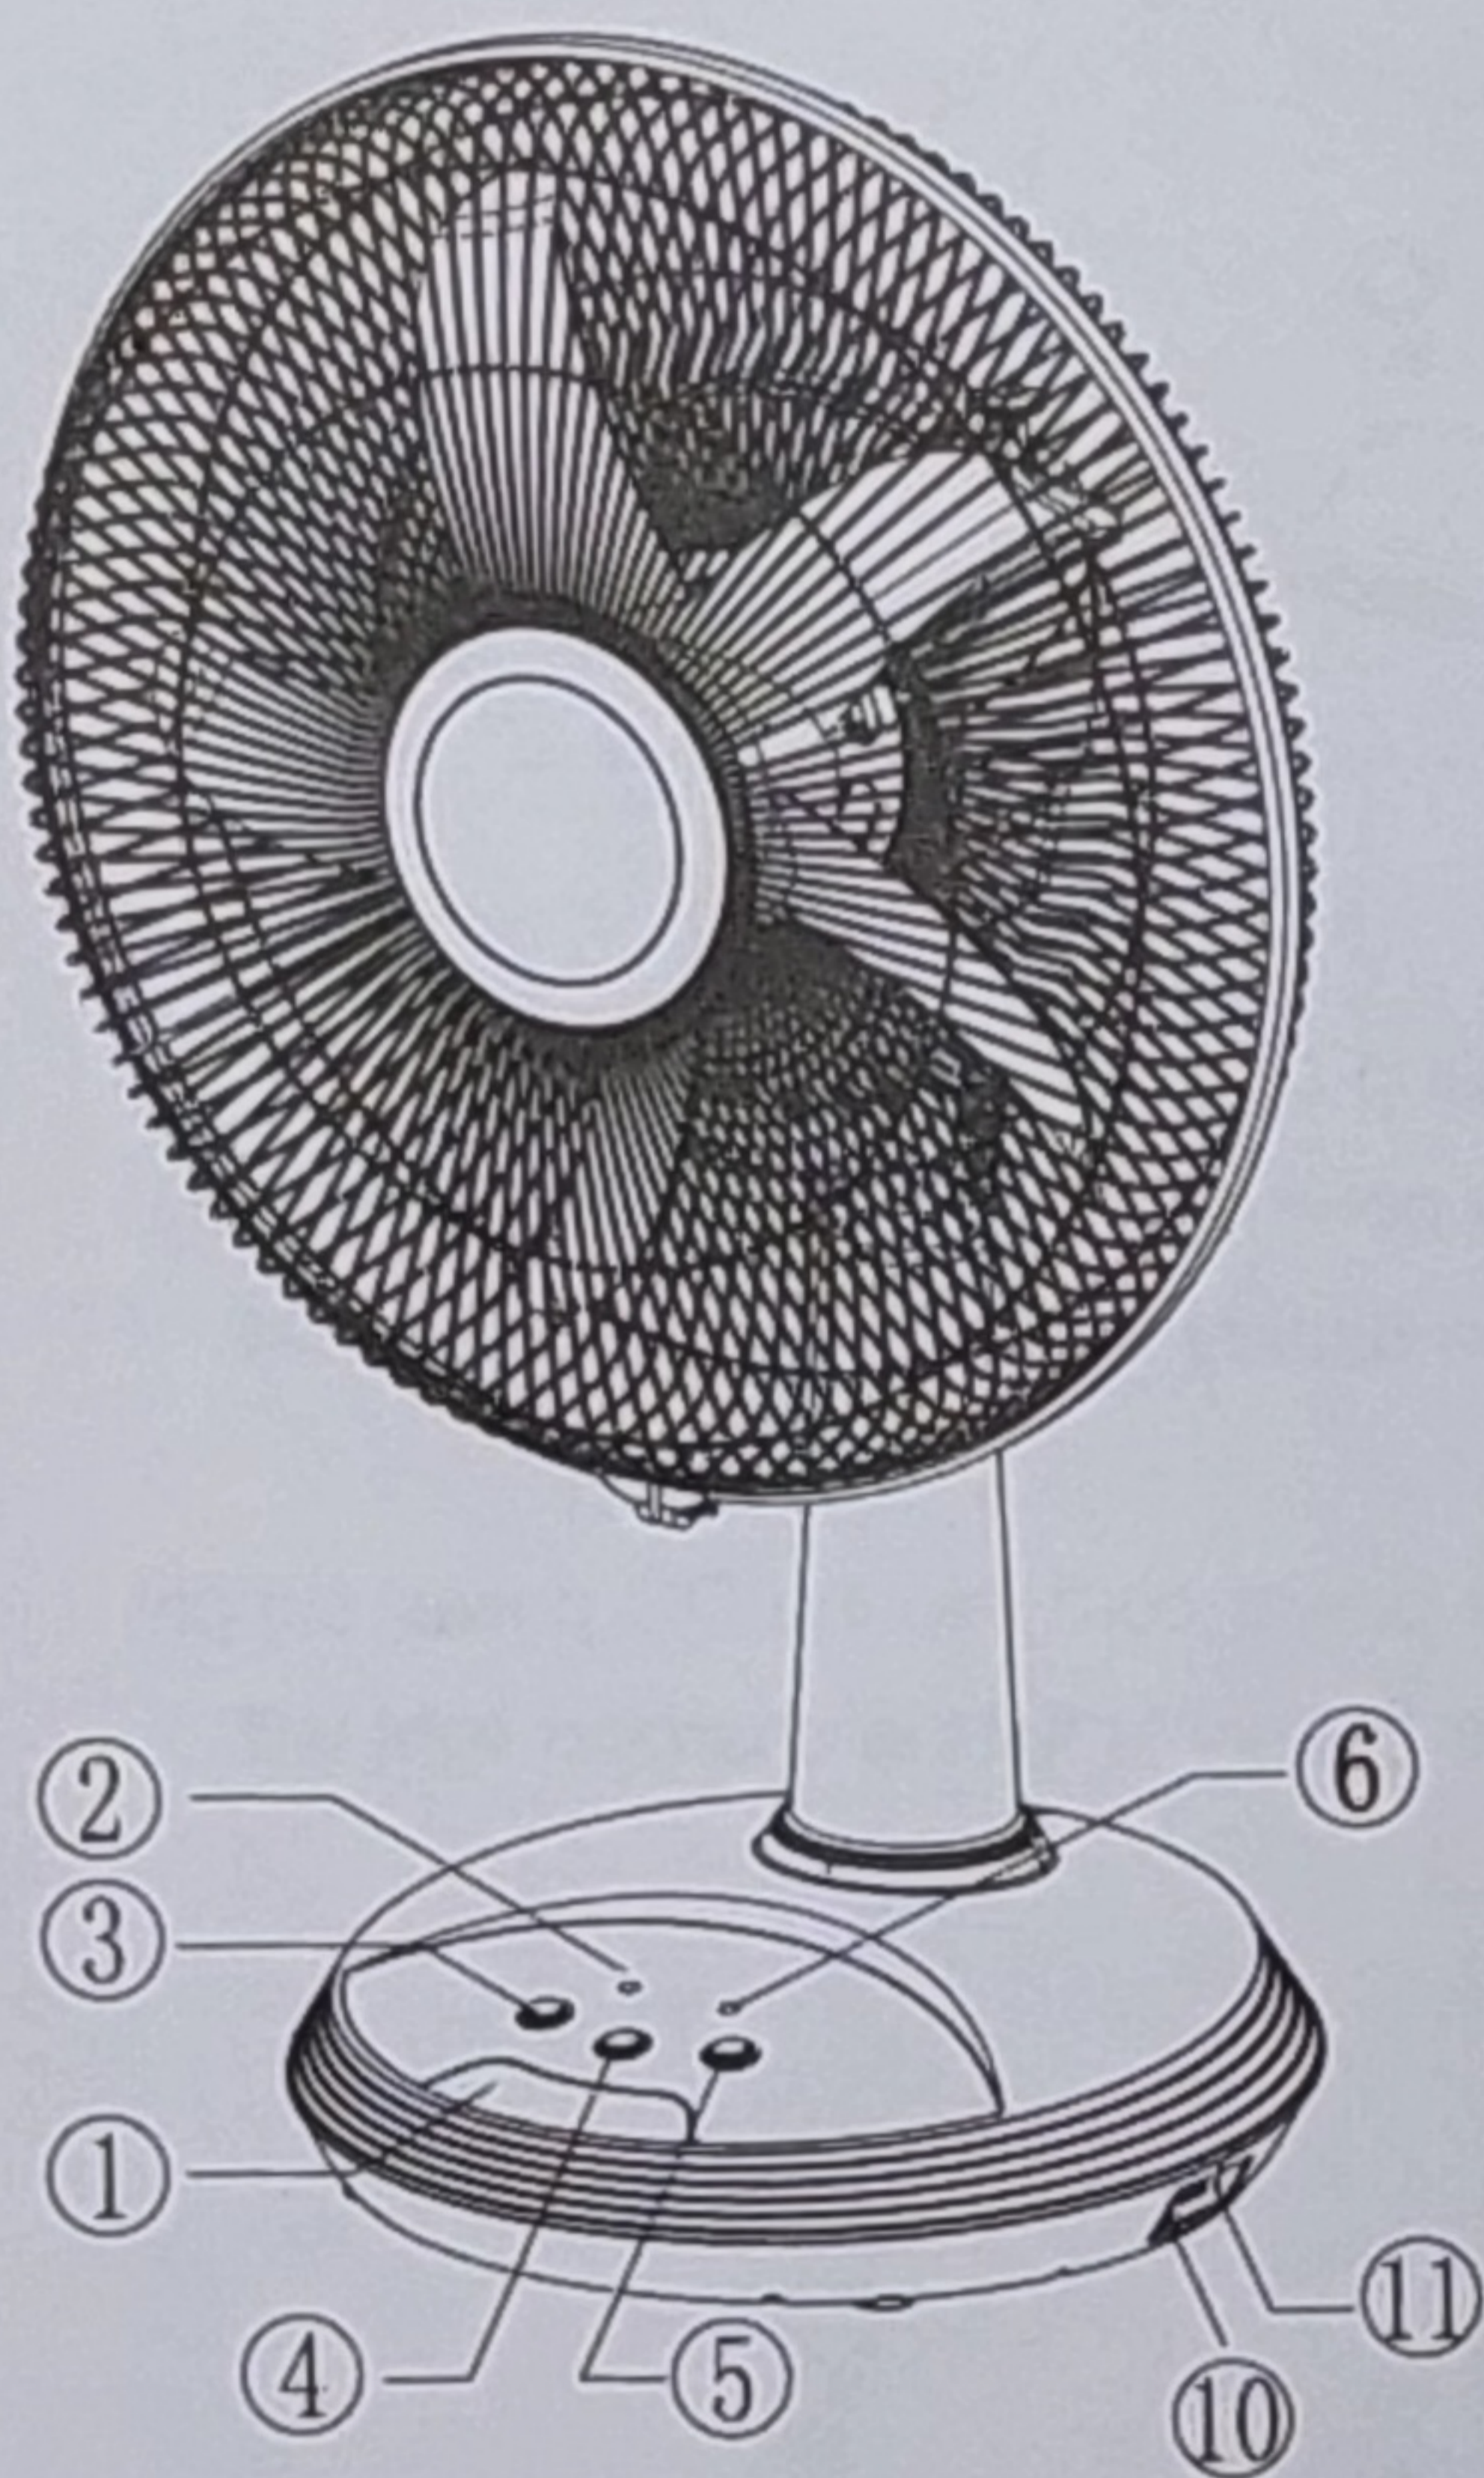

**NAME OF PARTS**

- |                       |                         |                               |
|-----------------------|-------------------------|-------------------------------|
| 1) Light Source       | 5) Gear Switch          | 9) Vertical Shaft Screw Holes |
| 2) Charging Indicator | 6) Work Indicating Lamp | 10) DC Socket                 |
| 3) Timing Switch      | 7) AC Socket            | 11) USB Socket                |
| 4) LED Switch         | 8) Oscillation Switch   |                               |