 


Instruction For Universal LCD/LED TV Remote Controller

Thank you for using our company remote controller products. When it is the first time to put if the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction:

CRC1195V is the newest universal LCD/LED TV remote control. Without setup, it's defaulted work for SAMSUNG, SONY, LG directly. Comprehensive care at different levels need, it can also set for different brand or model of TV. Finish setting in 30s. It is the best choice for your remote controller is lose or damaged, it will bring more convenient for your life.

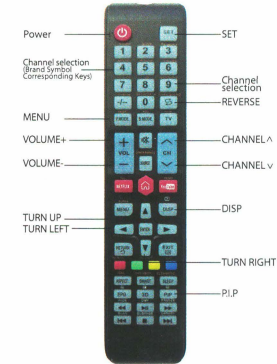

Battery Installation

In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rational), which is shown in the figure.



Battery Description

- The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
- Please do not put old and new batteries or different types of batteries together.
- In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting in new batteries.
- You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:

This remote controller has the following methods for setup. you can choose any of them.

A. Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.



2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.



4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B. Manually searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.



3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.



4, Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



C. Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state,

please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.



3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



D. Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY is "0".



Brand symbol table

POWER	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7
AKIRA	ACC	BBK	UNIBIS	SUPRA	SHARP	SONY	PHILIPS	SAVOY	HATCH	TECH	TECH
8	9	0	1	2	3	4	5	6	7	8	9
LG	SAMSUNG	PHILIPS	SHARP	SONY	TCL	POKKA	near	KONKA	CHON	DEK	JVC

2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.



E. Restore factory Settings

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

 
Русский

A. Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.



2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.



3. Введите три первых цифры кода, соответствующего модели телевизора. После ввода кода индикатор перестанет гореть, установка завершена



 
4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.




2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска.



3. Нажмите кнопку "громкость+", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.



 4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальные, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.




C. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.



 2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать. Пульт активировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.



3. Проверьте работу кнопок на ПДУ (Установите кнопку, кнопка питания, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



D.

1. Найдите код, соответствующий модели вашего телевизора. Например, для SKYWORTHY – это «0». Включите телевизор и направьте на него пульт.



Сравнительная таблица символов марки

POWER	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7
AKIRA	ACC	BBK	UNIBIS	SUPRA	SHARP	SONY	PHILIPS	SAVOY	HATCH	TECH	TECH
8	9	0	1	2	3	4	5	6	7	8	9
LG	SAMSUNG	PHILIPS	SHARP	SONY	TCL	POKKA	near	KONKA	CHON	DEK	JVC

2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпускайте кнопку, и индикаторная лампочка начнёт мигать. Активизировался режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет.

Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2



Español

A. Ingresa el código

 
1, Encender el televisor, apunte el control remoto hacia televisor. luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos



2, Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



3, Ingresar primer conjunto de código de tres dígitos. cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaría apagado, si el código es más de un conjunto. por favor, utilice la primera.



4, prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.

B. La búsqueda manual del código

1, Encender el televisor, apunte el control remoto hacia televisor.



2, Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



3, presione el botón de volumen + una vez y luego suéltelo. ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.



4, Después de que el símbolo de volumen aparece, pruebe otro botón de función (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.



C. La búsqueda automatica del códigos.

1, Encender el televisor, apunte el control remoto hacia televisor.



2 Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicador se enciende. Ver si el símbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automatica.



3, pruebe otro botón de función (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.



D. Mode de búsqueda de punto a punto

1, Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.



La table de symbole correspondance à la marque

POWER	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7
AKIRA	ACC	BBK	UNIBIS	SUPRA	SHARP	SONY	PHILIPS	SAVOY	HATCH	TECH	TECH
8	9	0	1	2	3	4	5	6	7	8	9
LG	SAMSUNG	PHILIPS	SHARP	SONY	TCL	POKKA	near	KONKA	CHON	DEK	JVC

2, pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimiento.



E. Restaurar los ajustes de fábrica
Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips

 
 
 
- If you have any problems when you set or use this remote controller, please try to do as follow.
- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
 - Battery Type: two pieces of AAA Batteries
 - After-sales Service
- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Instruction For Universal LCD/LED TV Remote Controller

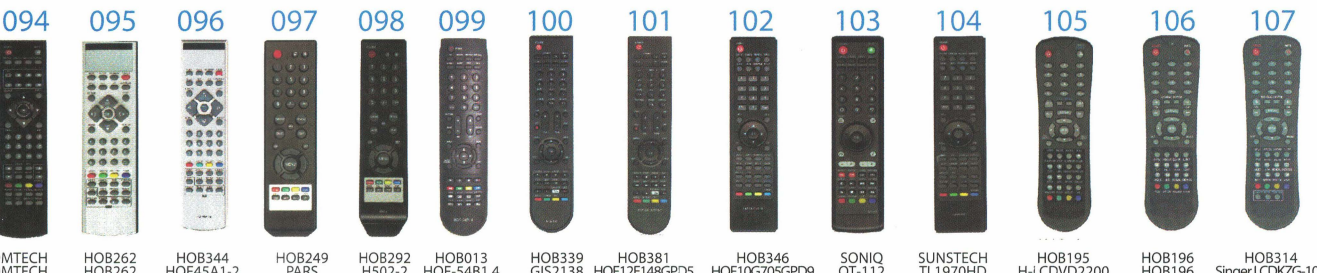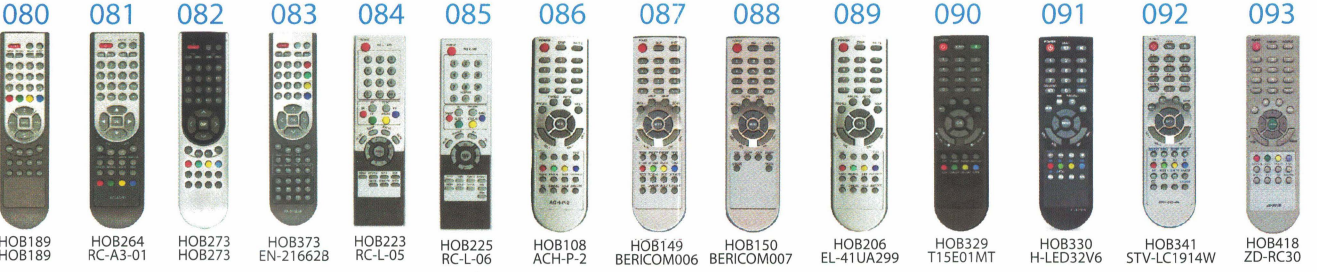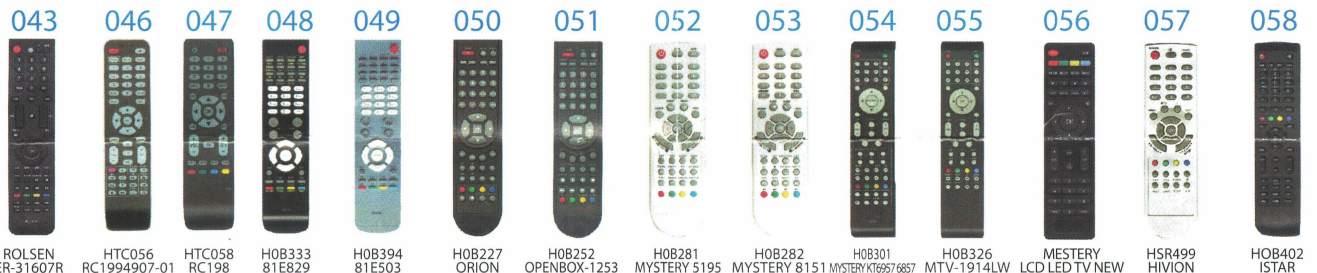

108

HOB386
RM-611

109

HOB308
IR 1492 SENCOR

110

HOB310
HOB310

112

HOB342
STV-LC1985WL

113

HOB382
GHOF 128441GPD11

114

HOB220-NF021RD
NF028RD-NF031RD-NF036RD-4N1

115

NF039RD
NF039RD

116

PC221
01

117

PC221
02

120

BC10SB
BC10SB

121

daytron
LCD TV

122

HOB358
RC-A03

123

RC
A06

124

RC
A10

125

TLCD
32HD-TELEFUNKEN

126

KAIMY
KAIMY

127

acer
acer

130

HOB162
BERICOM009

131

HOB187
GK23J6-C15

132



LCD-2699

133

HOB229
OPTICUM9600 TS20

134

HOB242
RC1994925

135

HOB253
SNOWA

136

HOB331
AKAI A4001032

137

HOB353
KM1128

138

HOB368
S5 S6 S7 S8 S9

139



LCD-2318

140

HOD142
HOD142

141

HOD148
VT-L9A11

142

HSR553
CYFROWY POLSAT

143

HSR585
IPM PLATFORM

144

Singer LCD TV
901-7650-315GIG

145

LCD
TV FU-1

146

LCT
01

147

LCT
02

148

148
148

149

HOB393
1253

150



12-17-2011_001

151



AOC-01

152



AOC-02

153



BENQ-01

154



BENQ-02

155



BENQ-03

156



BENQ-04

157



BENQ-05

158



VIZIO

159

NEC
RP-42L1

160

SANYO
JXPYR

161

ROLSSEN
RL-32L700U

162

POLYTRON
81F579

163



SAM_2446

164



SAM_2443

165



SAM_2457

166



LCD TV

167

AKAI
A3001012

168

AKAI
CX-507

169

BBK
EN-31907

170

CHANGHONG
GHK-4421A

171



E-RCU-015

348



BBK_EN-31907

349



Benq

350



china

351



EcoStar 2

352


HCH067-CGANGHONG
GHK-4421A

353



Heir2

 354

HOB477
AKAI CX-507

355

HOB478
E-RCU-015

356

HOB479
AKAI A3001012

357

HOB484
Akai LTA-15A15M

358

HOB489
MESTERY LCD LED TV NEW

359

HOB490
Polar HTR-D18A

360

HOB491
Polar SSLTV6002

361



Orient

362

PROTON 2
EN-31618P 81E878

363

POLYTRON
RL-32L700J 3D

364

HOB864
SNOWA T202-1

365

HOB455
ELECTRON T-81100

366

HOB457
RL-32L700J 3D

367

HOB464
BRAVIS LED 2868 HQ

368

HOB465
DIGITAL DLE-4011

370

HOB46
LUXEON LED3213 HQ

371

ORION EP
22 LCD 2623

372

HOB493
HAIER

373

HOB494
SUPRA

374

HOB498
SHOWNIC

375



LEA-19V07P

376



IZUMI

377



81F579

378



ORION OR-LCD2

379



 
FUSION RC21b

380




SUPRA RC6w

381




SUPRA RC8b

 382



SUPRA RC10w

 383



SUPRA RC18b

384



RC-LEM100

385



BBK RC-LEM101

386

 


BBK RC-LEM100

387



IZUMI TL26H2118

 JAC	 SKY LINE	 TRUMAN	 union tech	 ATLAS HD100	 HOB688 ATLSS HD-2005	 KK-Y331J	 KK-Y331J	 HD LED100	 GB TY ONGOV59	 XY-802E	 LCD TV PHONAR	 PHONAR LED TV	 DAWA MV
 iDEA	 iDEA	 iDEA	 iDEA	 iDEA	 iDEA	 iDEA	 iDEA	 AOC-02	 DEX LT-2220	 ORION LED2643	 Akai SLP-006P	 Fusio FLTV 22H11	 Fusio FLTV 33H17
 FUSION RC15b	 Shivaki k77	 Shivaki k78	 Supra TV-DVD	 RC-GK22G1	 H-LCD3210	 LED321LC	 SKYPRIME HD	 SUPRA RC21b-1219	 ORION LCD	 TC 1860F1-RS	 JH-11370	 LED-851	 RC-D3
 YC-53	 STV-22LED5	 LED-EH4720BF	 DNS M28AM8	 051D RED	 33585	 RC33729	 HOB842	 34090	 34091	 RC31277	 Fusion RC25b	 RCF23b	 RC-E23
 AKI AK61	 AKILCD AK66	 AKILCD AK68	 AKI-OND IGO LCD	 ONIDA LCD	 ONIDA LCD ON87	 051D BLACK	 SNOWAS1163	 BLAUPUNKT	 J-1274	 MERTER33186	 BRAVIS IFD-1615	 STV-42LED5	 ONIDA LCD1
 Akai HOF08J001	 Polar 94LTV6004	 AN-LT3222 AN-LT3225 AN-LT2416	 FUSION HY-079	 SATURN LED40FHD500U	 DEXP 16A3000	 RUBIN RB-28D7T2C	 DNS S19ASL1	 RM-NST60	 RM-SK09				



For more details
Pls scan QR code