


SENIOR FAN

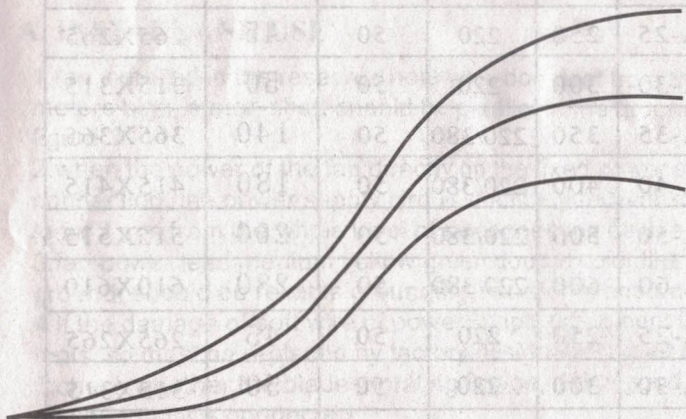

Instruction for use



Three: specifications

TYPE	MODE	Technical (MM)	Voltage (v~)	Frequehcy (Hz)	Power (W)	Size (mmXmm)
Axial exhanst fan series	FA-20	200	220	50	40	215X215
	FA-25	250	220	50	45	265X265
	FA-30	300	220	50	50	315X315
	FA-35	350	220/380	50	140	365X365
	FA-40	400	220/380	50	180	415X415
	FA-50	500	220/380	50	200	515X515
	FA-60	600	220/380	50	280	610X610
Powerfal moter type ventilation series	KFA-25	250	220	50	45	265X265
	KFA-30	300	220	50	50	315X315
	KFA-35	350	220/380	50	140	365X365
	KFA-40	400	220/380	50	180	415X415
	KFA-50	500	220/380	50	200	515X515
	KFA-60	600	220/380	50	280	610X610



Dear customer, thank you buy my factory production of the fan. Ventilator series products, with large air volume, low noise, safety, energy saving, durable wait for an advantage, is a family, office, factory and the hotel to adjust temperature, choice of circulating air.

A, INSTALL AND USE

1. fan installed in the reserved hoie wall, door leaf from the ground 2.3 meters high, motor, shaft should be parallel to the ground. As shown in figure 1
2. when the power of the fan directly on the fixed power supply circuit connection, the power supply circuit shall be fitted with contact for at least 3 mm from the whoie level of disconnecting device.
3. fan power lead medium yellow green double color line contact ground, should be reliable grounding, in order to ensure safety.
4. if the damage of soft wire of power supply equipment for required tools, so must be replaced by factory designated repair shop.
5. check whether the blades rotating flexibe, if turn good, can use the power supply is connected.
6. read the instructions carefully before use, connected to the power supply, exhaust fan shuld be able to run properly, no vibration or sound.

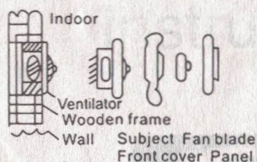


Figure 1

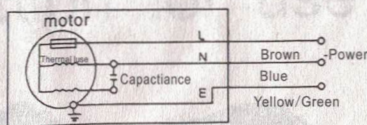


Figure 2 cir cuit diagram

SECOND, THE MAINTENANCE METHOD

1. use after a period of time, can remove plastic mask and wind vane to clean. Loosen the wind leaf round head screw counterclockwise, can unload the wind leaf, wipe with dry cloth to the casing and the dust on the motor, oil, and then packed the wind leaf, panel.
2. after a year of use, can remove fan in front of the motor shaft after cleaning, add a little oil quality on back cover gas hole, keep oil bearing lubrication.