
OPERATION MANUAL

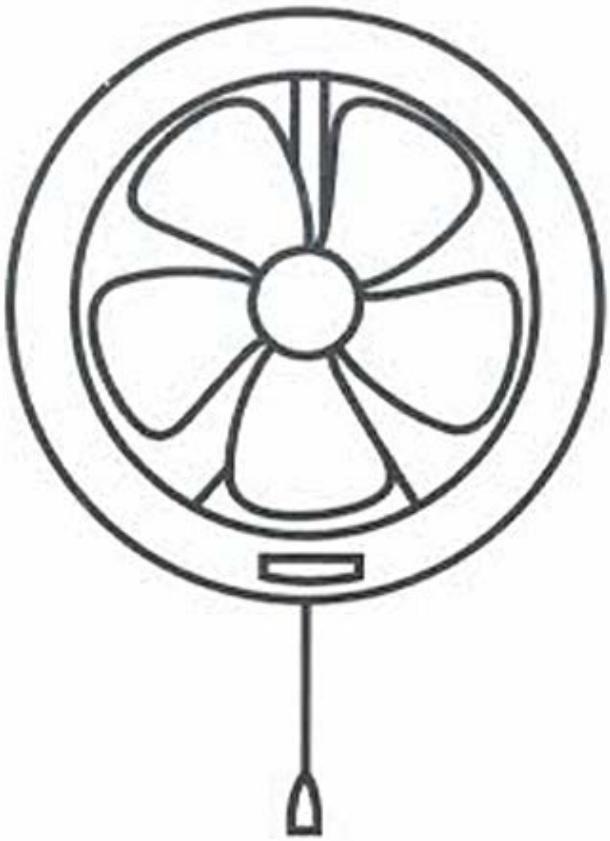


Model No.: 6 inch; 8 inch


Please read the instructions completely before operating this product.

A.INSTALLATION


1.Make a hole as dimensions shown on the table in glass.
2.Put the glass gasket into the mounting hole in the glass,then fix the fan body without panel (front cover) and tighten the fan body with mounting screw.
3.Re-fix the fan panel to the fan body.
4.Make sure the power supply to the fan is correct same as that the label indicated.
5.Make a trial operation of the fan,ensure no any vibration and abnormal noise and sound.
6. Never install the fan over the gas cooker and heat resource etc.

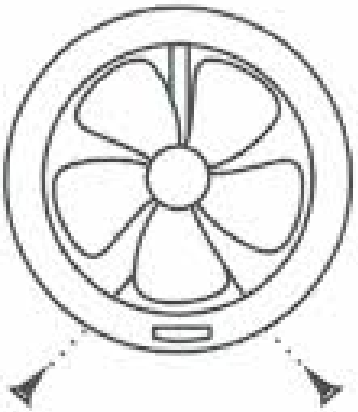

MODEL	A	B
6 inch	183~188mm	250mm
8 inch	241~246mm	300mm

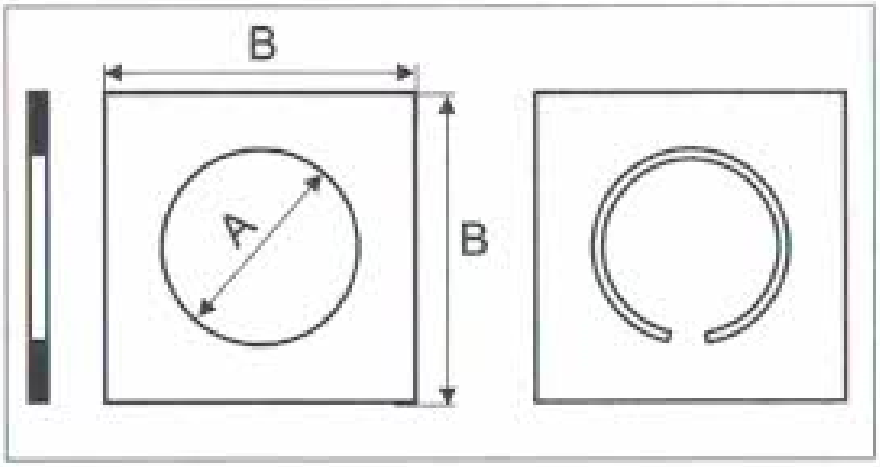

C.EXPLOSIVE DIAGRAMS & PARTS IDENTIFICATION

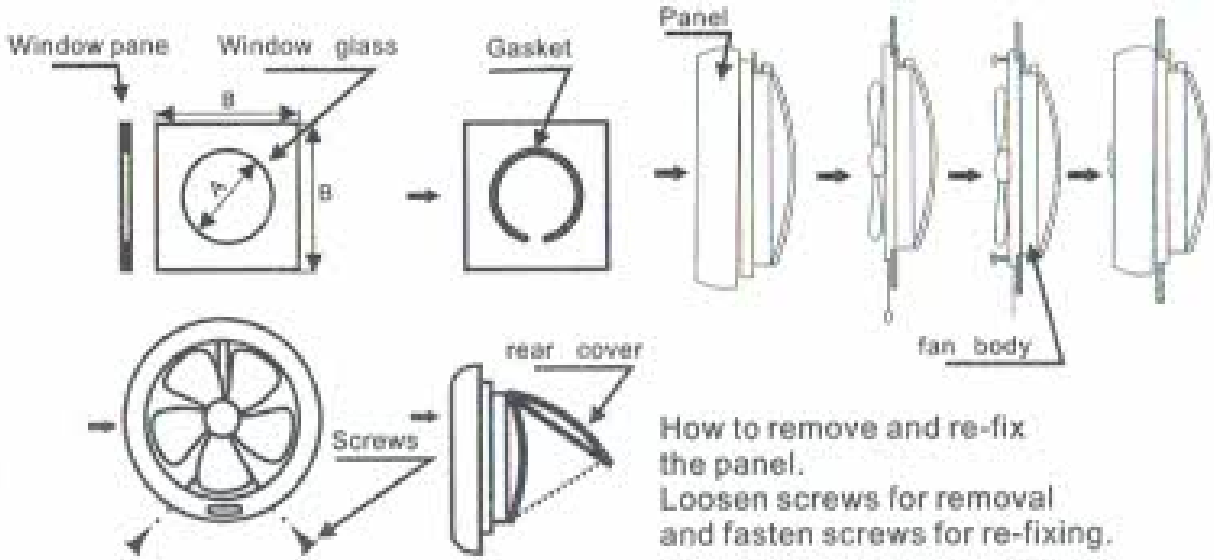

How to remove and re-fix the panel.
Loosen screws for removal and fasten screws for re-fixing.

D.PERFORMANCES

MODEL	VOLTAGE (V/Hz)	SPEED (r.p.m)	AIR-FLOW (CBM/h)	POWER (W)	SIZE (mm)
6 inch	220/50	1880-2180	260	15	150
8 inch		1800-2000	480	25	200

E.MAINTENANCE CAUTIONS

1.Make sure to switch off the fan before cleaning
2.Use the fan in dry place,avoid excessive dumps and water steams.
3.Never use petrol,benzene or other such chemicals to cleaning the fan.
4.Never allow water to contact the electrical parts such as switch and motor.
5.Never immerse blades or other resin parts in hot water over 60℃

B. INSTALLATION CAUTIONS

1. Make sure to choose the correct voltage before any connecting with the power supply.
2. The wire must be firm and safe.
3. There must be no collision while moving the fan blade by hand before connecting with the power supply.
4. Fans are not applicable where there is acid, alkaline and explosive gases.
5. Ground height should be not less than 2.3m while mounting.
6. Yellow-green wire must be well earthed.
7. The wires working must be carried on by a qualified electrician.

