

FEEDERS

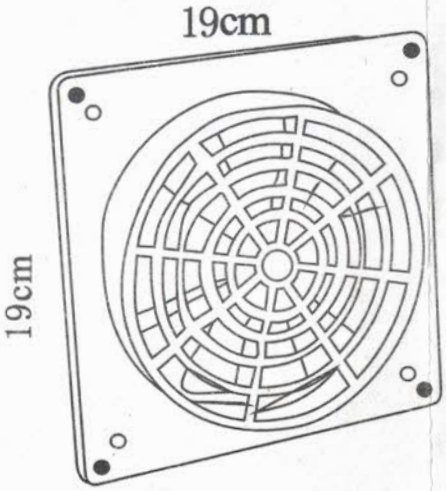

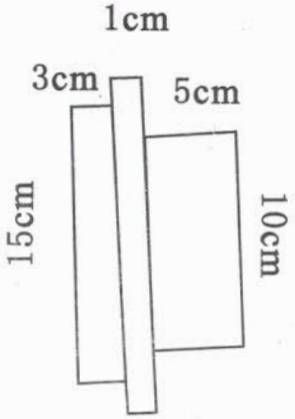

SIZE/MODEL	**4”**
VOLTAGE/POWER	**AC220V**
FREQUENCY	**50Hz**
WATTS/POWER	**25W**

Way of install:

When exhaust fan through power supply, it can start normally. It can not work when it through power supply, you have to check the motor.

Exhuast fan should set into the wall and keep equilibrium, can not close to flre.