

Cable Tracer(Amplifier Probe & Tone Generator)


180 CB
181 CB

179 CB

- 179 CB and 181 CB have the same shape and specifications.
- 179 CB has a rotatable sensor probe tip.

Amplifier Probe (180 CB-A 181 CB-A)

- The Amplifier Probe is designed to identify and trace wires or cables within a group without damaging the insulation.
- Works with any Tone Generator to identify wires.
- Volume control for increased sensitivity and adjustable to suit work environment.
- Recessed ON/OFF button prevents battery drain.
- A phone jack is designed for headset or handset.

Tone Generator (180 CB-G)

- Tone Generator is a great tool for locating and identifying cable pairs or individual conductors.
- 180 CB-G doesn't only provide the function of a tone generator, but also serves as a continuity and polarity tester.
- Test results are displayed by a bi-colored LED.

Tone Generator (181 CB-G)

- Tone Generator is a great tool for locating and identifying cable pairs or individual conductors.
- 181 CB-G does not only serve as a tone generator, but also serves as a continuity and polarity tester.
- A tone selector switch located inside the unit for selection of the fast tone or the slow tone.
- The continuity function is only applied to Line 1.
- Two bi-colored LEDs for Line1 and Line2 indication of the polarities of the telephone lines.
- The unit has alligator type terminals, a modular cable of 4 conductors with a strong connector.

Amplifier Probe (180 CB-A 181 CB-A)

Frequency	1Hz~12kHz
Receiver distance	< 50cm
Sensitivity control	√
Probe tip	Fixed
Power source	9V(6F22) × 1
Dimensions	230(L) × 56(W) × 27(D)mm
Weight	Approx. 125g (battery included)

Tone Generator (180 CB-G) (181 CB-G)

Wave form	Square Wave	
Frequency	1kHz±15%	
Over voltage protection	100V DC	80V DC
Single tone	√	—
Alternating tone	Fast	Fast and Slow
Connection	RJ11 connector, alligator clip x 2, RJ45 connector (optional)	
Power source	9V(6F22) × 1	
Dimensions	64(L)×58(W)×34(D)mm	86(L)×63(W)×26(D)mm
Weight (battery included)	Approx. 120g	Approx. 130g

General

Operating temp. & humidity	0°~40°C, 80% Max.
Storage temp. & humidity	-10°~50°C, 80% Max.
Safety standard	EN 61326-1 EN 55011 EN 61000-4-2 EN 61000-4-3
Accessories	Instruction manual Soft pouch Batteries

Amplifier Probe & Tone Generator

Amplifier Probe

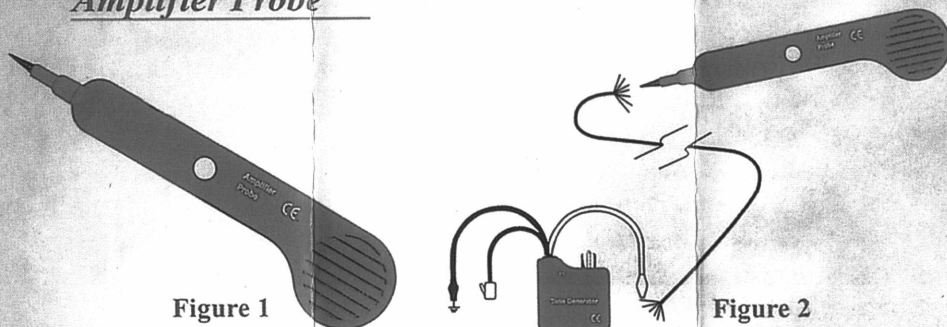


Figure 1

Figure 2

FEATURES

- The Amplifier Probe is designed to identify and trace wires or cables within a group without damaging the insulation.
- Works with any Tone Generator to identify wires.
- Volume control for increased sensitivity and adjustable to suit work environment.
- Recessed ON/OFF button prevents battery drain.
- Power supply is in any 9V battery with a life of approximately 100 hours.
- A plug receptacle is provided for head set or head phone.

INSTRUCTIONS

1. Connecting the tone generator.
In terminated working cables:
Connect one test lead to a terminated wire and the other test lead to earth or equipment ground. (See figure 2)
In unterminated or non-working cables:
Connect one test lead to an unterminated wire and the other test lead to another unterminated wire.
2. Depress the round on/off spring-loaded button of the amplifier probe. The volume control switch can be adjusted to suit the environment. Volume can be increased to overcome noise, or decreased to reduce interference.
3. Touch the tip of the amplifier probe to the insulation of each suspect conductor.

4. Reception of tone will be loudest on the subject wire.
5. The plug receptacle is provided for connecting to a head set or hand set.

MAINTENANCE

The amplifier probe is maintenance free except for battery replacement. Remove the screw from the battery compartment, replace the 9V battery and reassemble.

Warranty limited solely to repair or replacement; no warranty of merchantability, fitness for a particular purpose or consequential damages.

Tone Generator

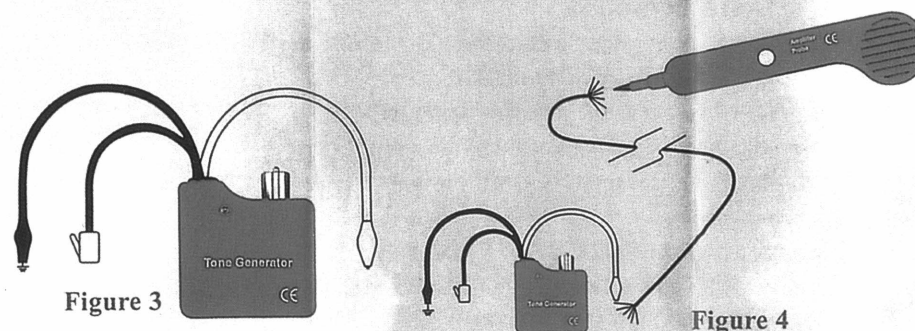


Figure 3

Figure 4

FEATURES

- Red and black test leads are provided, and has a standard 4 conductor modular cord and plug.
- A 3-position toggle switch controls the modes of operation plus a 3-colored LED Light Emitting Diode is provided for line polarity, continuity and voltage testing.
- A tone selector switch, located inside the test set is provided for choosing either a single solid tone or dual alternating tone.
(CAUTION: DO NOT CONNECT TO AN ACTIVE AC CIRCUIT EXCEEDING 24V IN THIS MODE.)

INSTRUCTIONS

● IDENTIFYING TIP & RING (SWITCH TO "OFF")

1. Connect the RED test lead to the side of one line and the BLACK lead to the side of another line.
2. The LED will glow "GREEN" when you connect the RED test lead to the RING SIDE of the line.
3. The LED will glow "RED" when you connect the RED test lead to the TIP SIDE of the line.

IDENTIFYING LINE CONDITION (SWITCH TO "OFF")

1. Connect the RED test lead to the RING SIDE of the line and the BLACK to the TIP.
2. Watch the LED:
 1. A BRIGHT "GREEN" LED indicates a CLEAR line.
 2. No lamp indicates a BUSY line.
 3. A BRIGHTLY FLICKERING "YELLOW" lamp indicates a RINGING line.

VERIFYING LINES (SWITCH TO "OFF" THEN "CONT")

1. Dial the line to be verified.
2. While the line is ringing, connect the RED lead to the RING SIDE of the line and the BLACK to the TIP.
3. In the "OFF" position, the indicator lamp will flicker "YELLOW" when the test leads are connected to the subject pair.
4. If you switch the test set to "CONT", it will terminate the call on the subject line.

SENDING TONE (SWITCH TO "TONE")

CAUTION: DO NOT CONNECT TO ANY ACTIVE AC CIRCUIT EXCEEDING 24V IN THIS MODE.

1. Connect the test leads to the pair, or attach one lead to ground and one lead to either side of the line.(See figure 4)
2. A dual alternating tone, or a single solid tone can be selected from the switch inside the tone generator.
3. Probe the suspected wires with the amplifier probe. Reception of tone will be strongest on the subject wire. In cases of ready access to bare conductors, a handset or headset may be used to receive the tone.

TESTING CONTINUITY (SWITCH TO "CONT")CAUTION: DO NOT CONNECT TO ANY ACTIVE AC OR DC CIRCUIT IN THIS MODE.

1. Connect the test leads to the subject pair.
2. Use "cont" position.
3. A bright "GREEN" light indicates continuity. The LED will not glow if the line resistance exceeds 10000Ω

TESTING CONTINUITY USING TONE (SWITCH TO "TONE")

CAUTION: DO NOT CONNECT TO ANY ACTIVE AC OR DC CIRCUIT IN THIS MODE.

1. Connect the test leads to the subject pair.
2. Use a handset or headset at the remote end and touch the wire end(s) with the clip lead(s).
3. Reception of tone is an indication of continuity.

MODULAR TESTING

1. All above tests are available through the modular plug for line 1 only - red and green wires.

COAX TESTING

1. To test unterminated coax, connect red to outer shield and black to center conductor or red to outer shield and black to ground.
2. To test terminated coax, connect red to connector housing and black to center pin or red to connector housing and black to ground.

MAINTENANCE

BATTERY REPLACEMENT INSTRUCTIONS

1. Separate the case, install a fresh 9V battery and reassemble. DO NOT OVERTIGHTEN.
2. Warranty limited solely to repair or replacement; no warranty of merchantability, fitness for a particular purpose or consequential damages.

Remember to turn off the tone generator after tracing cables.